



# Compress 5800i with pre-plumbed cylinder

## System schematic and wiring diagrams

4kW to 7kW.





## Compress 5800i 4-7kW

### Pre-plumbed systems

#### System

#### Wiring

CS5800i AW R-S Single zone UFH with pre-plumbed cylinder

CS5800i AW R-S Single Zone Radiator with Pre-Plumbed Cylinder

CS5800i AW R-S 3rd party solution with a pre-plumb cylinder


CS5800i AW 2Z, one open circuit, 3rd party controls with a pre-plumbed cylinder

CS5800i AW 2Z, 2 UFH , 3rd party pump and mixer with a pre-plumbed cylinder

CS5800i AW 2Z 1 Rad, 1UFH , RT800, 3rd Party Pump with a Pre-Plumbed Cylinder




Key	Description
	T1 sensor
	Isolation valve
	Drain off valve
	Filling valve
	Magnetic filter
	Pump
	High limit stat
	PRV
	CR20RF

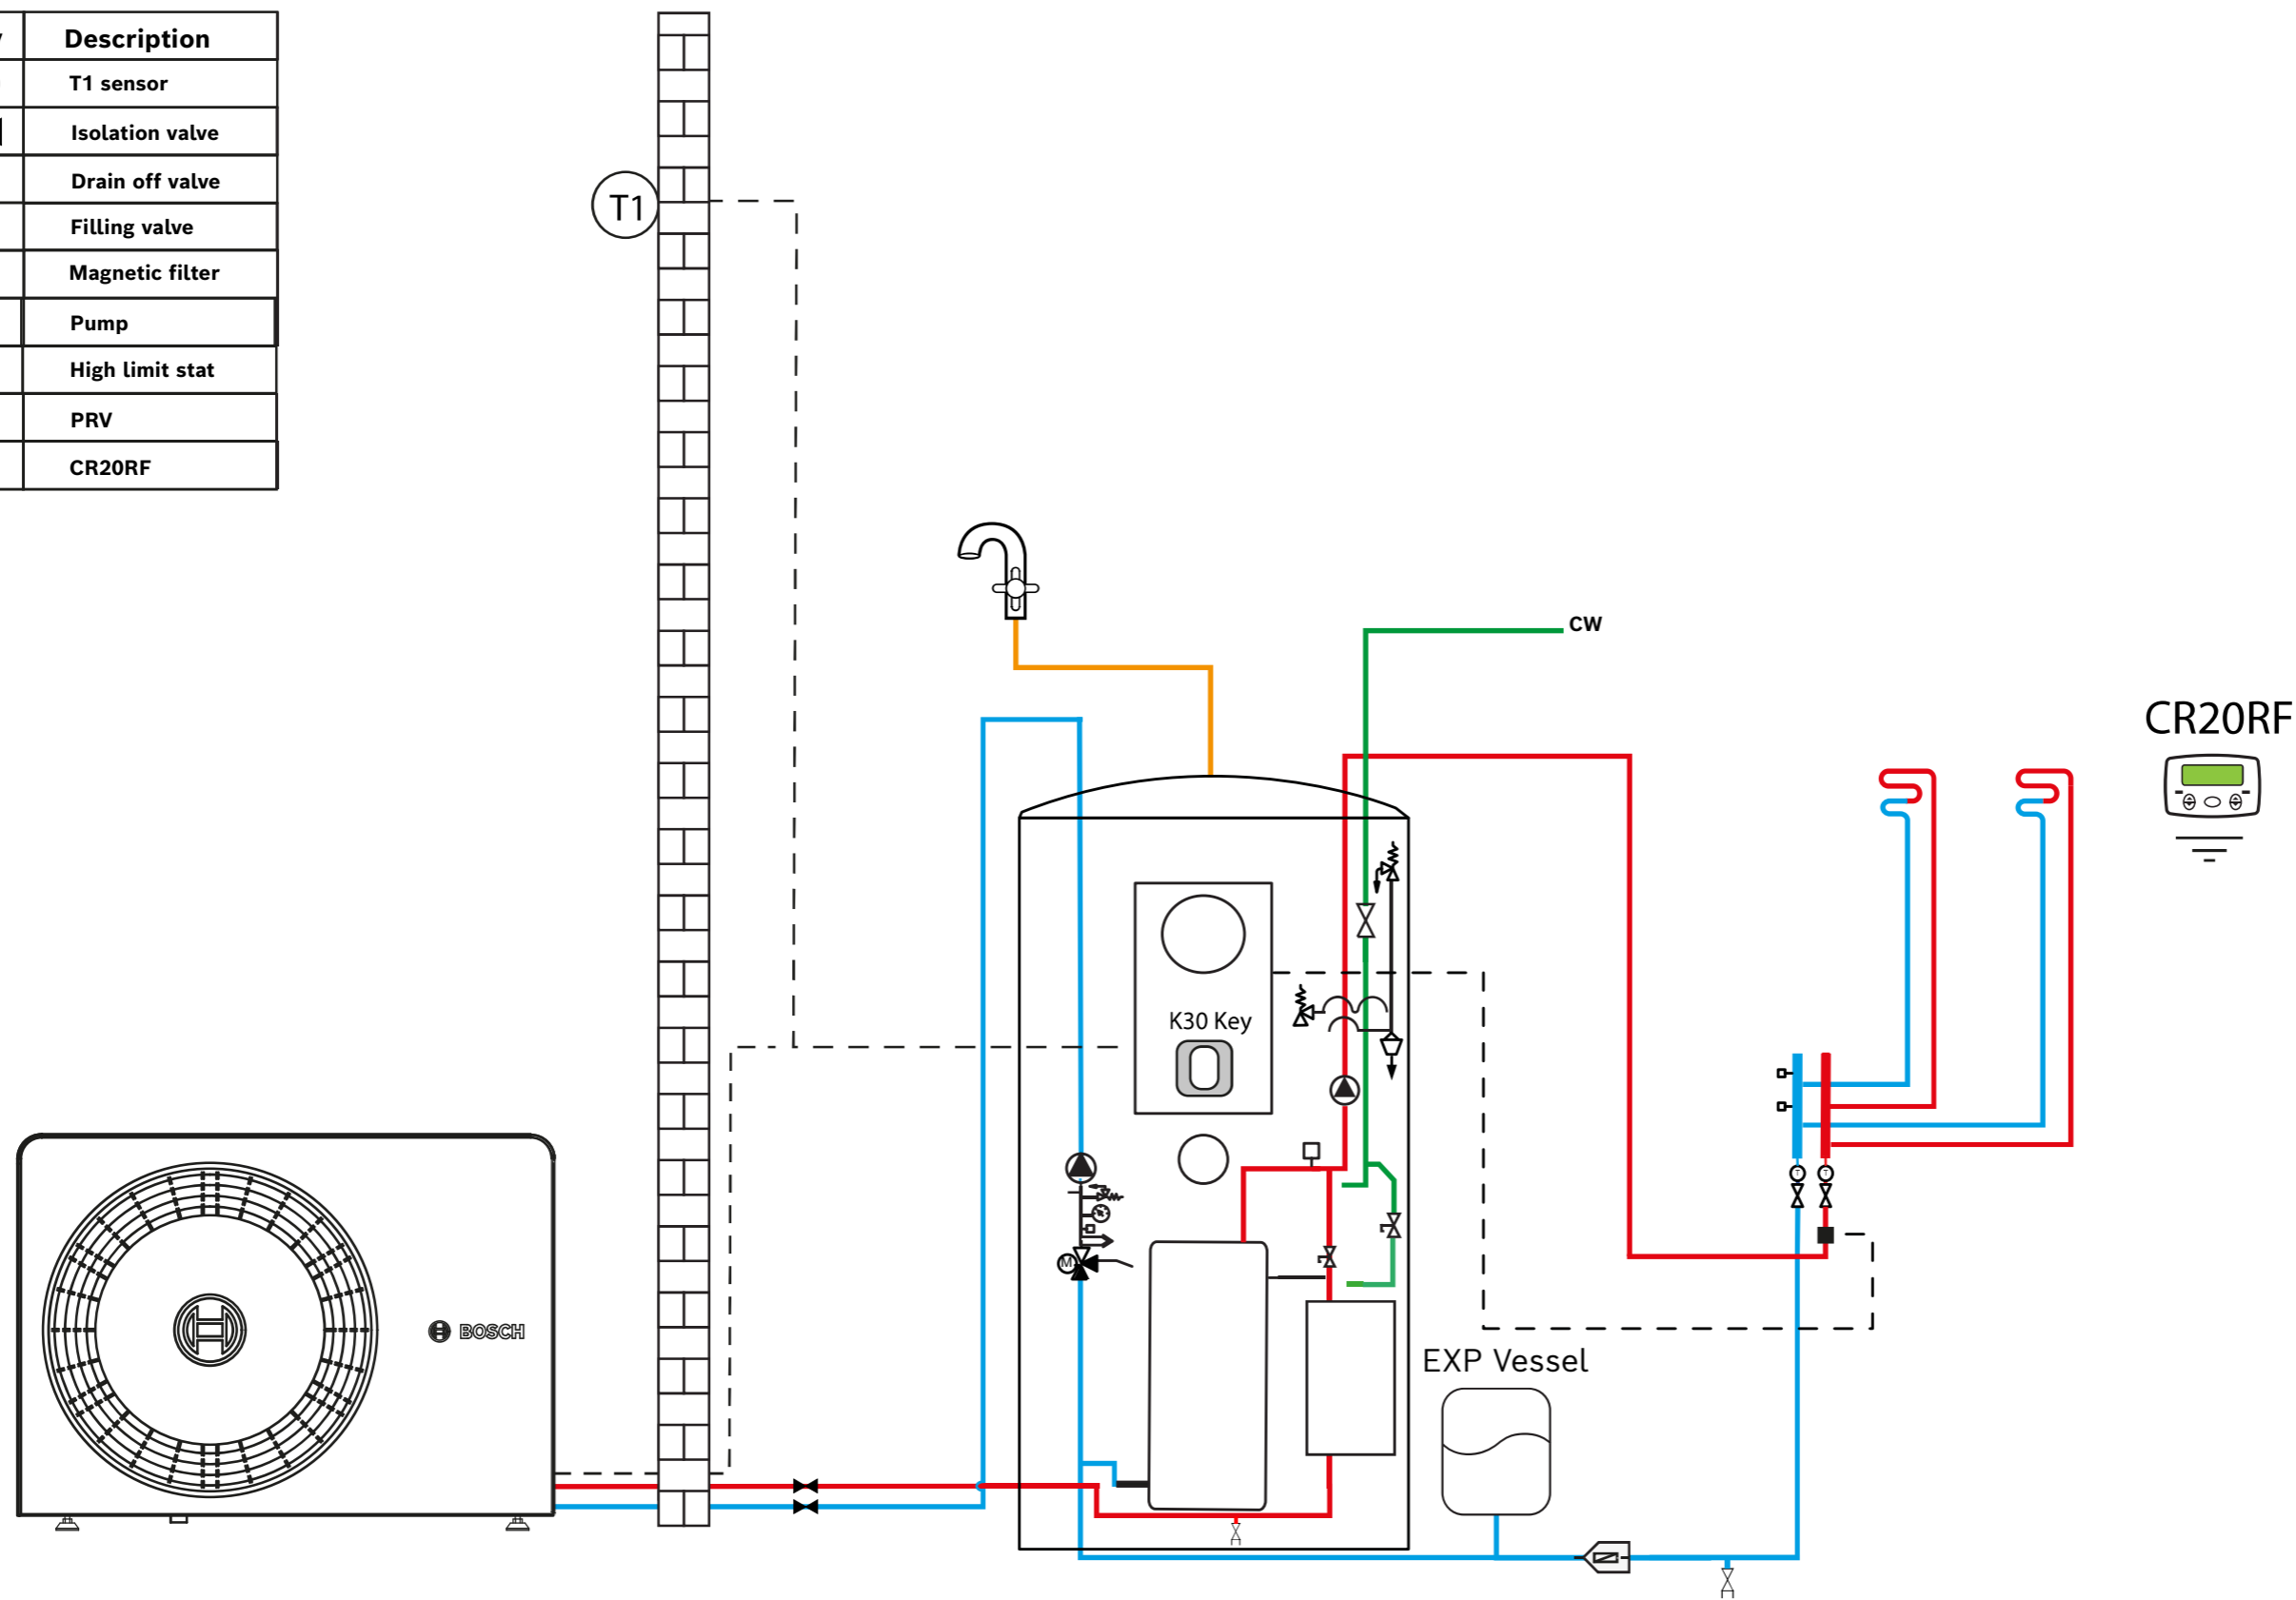

All electrical work should be carried out by a registered engineer. Wiring must comply with the latest IET wiring regulations. Isolate the mains electricity supply before starting any work and observe all relevant safety precautions. Refer to all relevant product installation manuals for safety and installation instructions. Whilst it is always our intention to fully assist, it is essential to recognise that all information given by the company is provided in good faith and based upon the information available. Connection labels may not match those of the products installed on site. We recommend that advice should always be checked with your installer, electrician or the manufacturer of the product in question. Consequently, the company cannot be held responsible for any liability relating to the use or repetition of such information or part thereof. In addition, whilst making every reasonable effort to monitor the performance and quality of our supply, installation and service network, we do not accept responsibility for the workmanship or operation of any third party company.

For further information or assistance please contact:  
 Email: [system.design@uk.bosch.com](mailto:system.design@uk.bosch.com) Tel: 01905751464

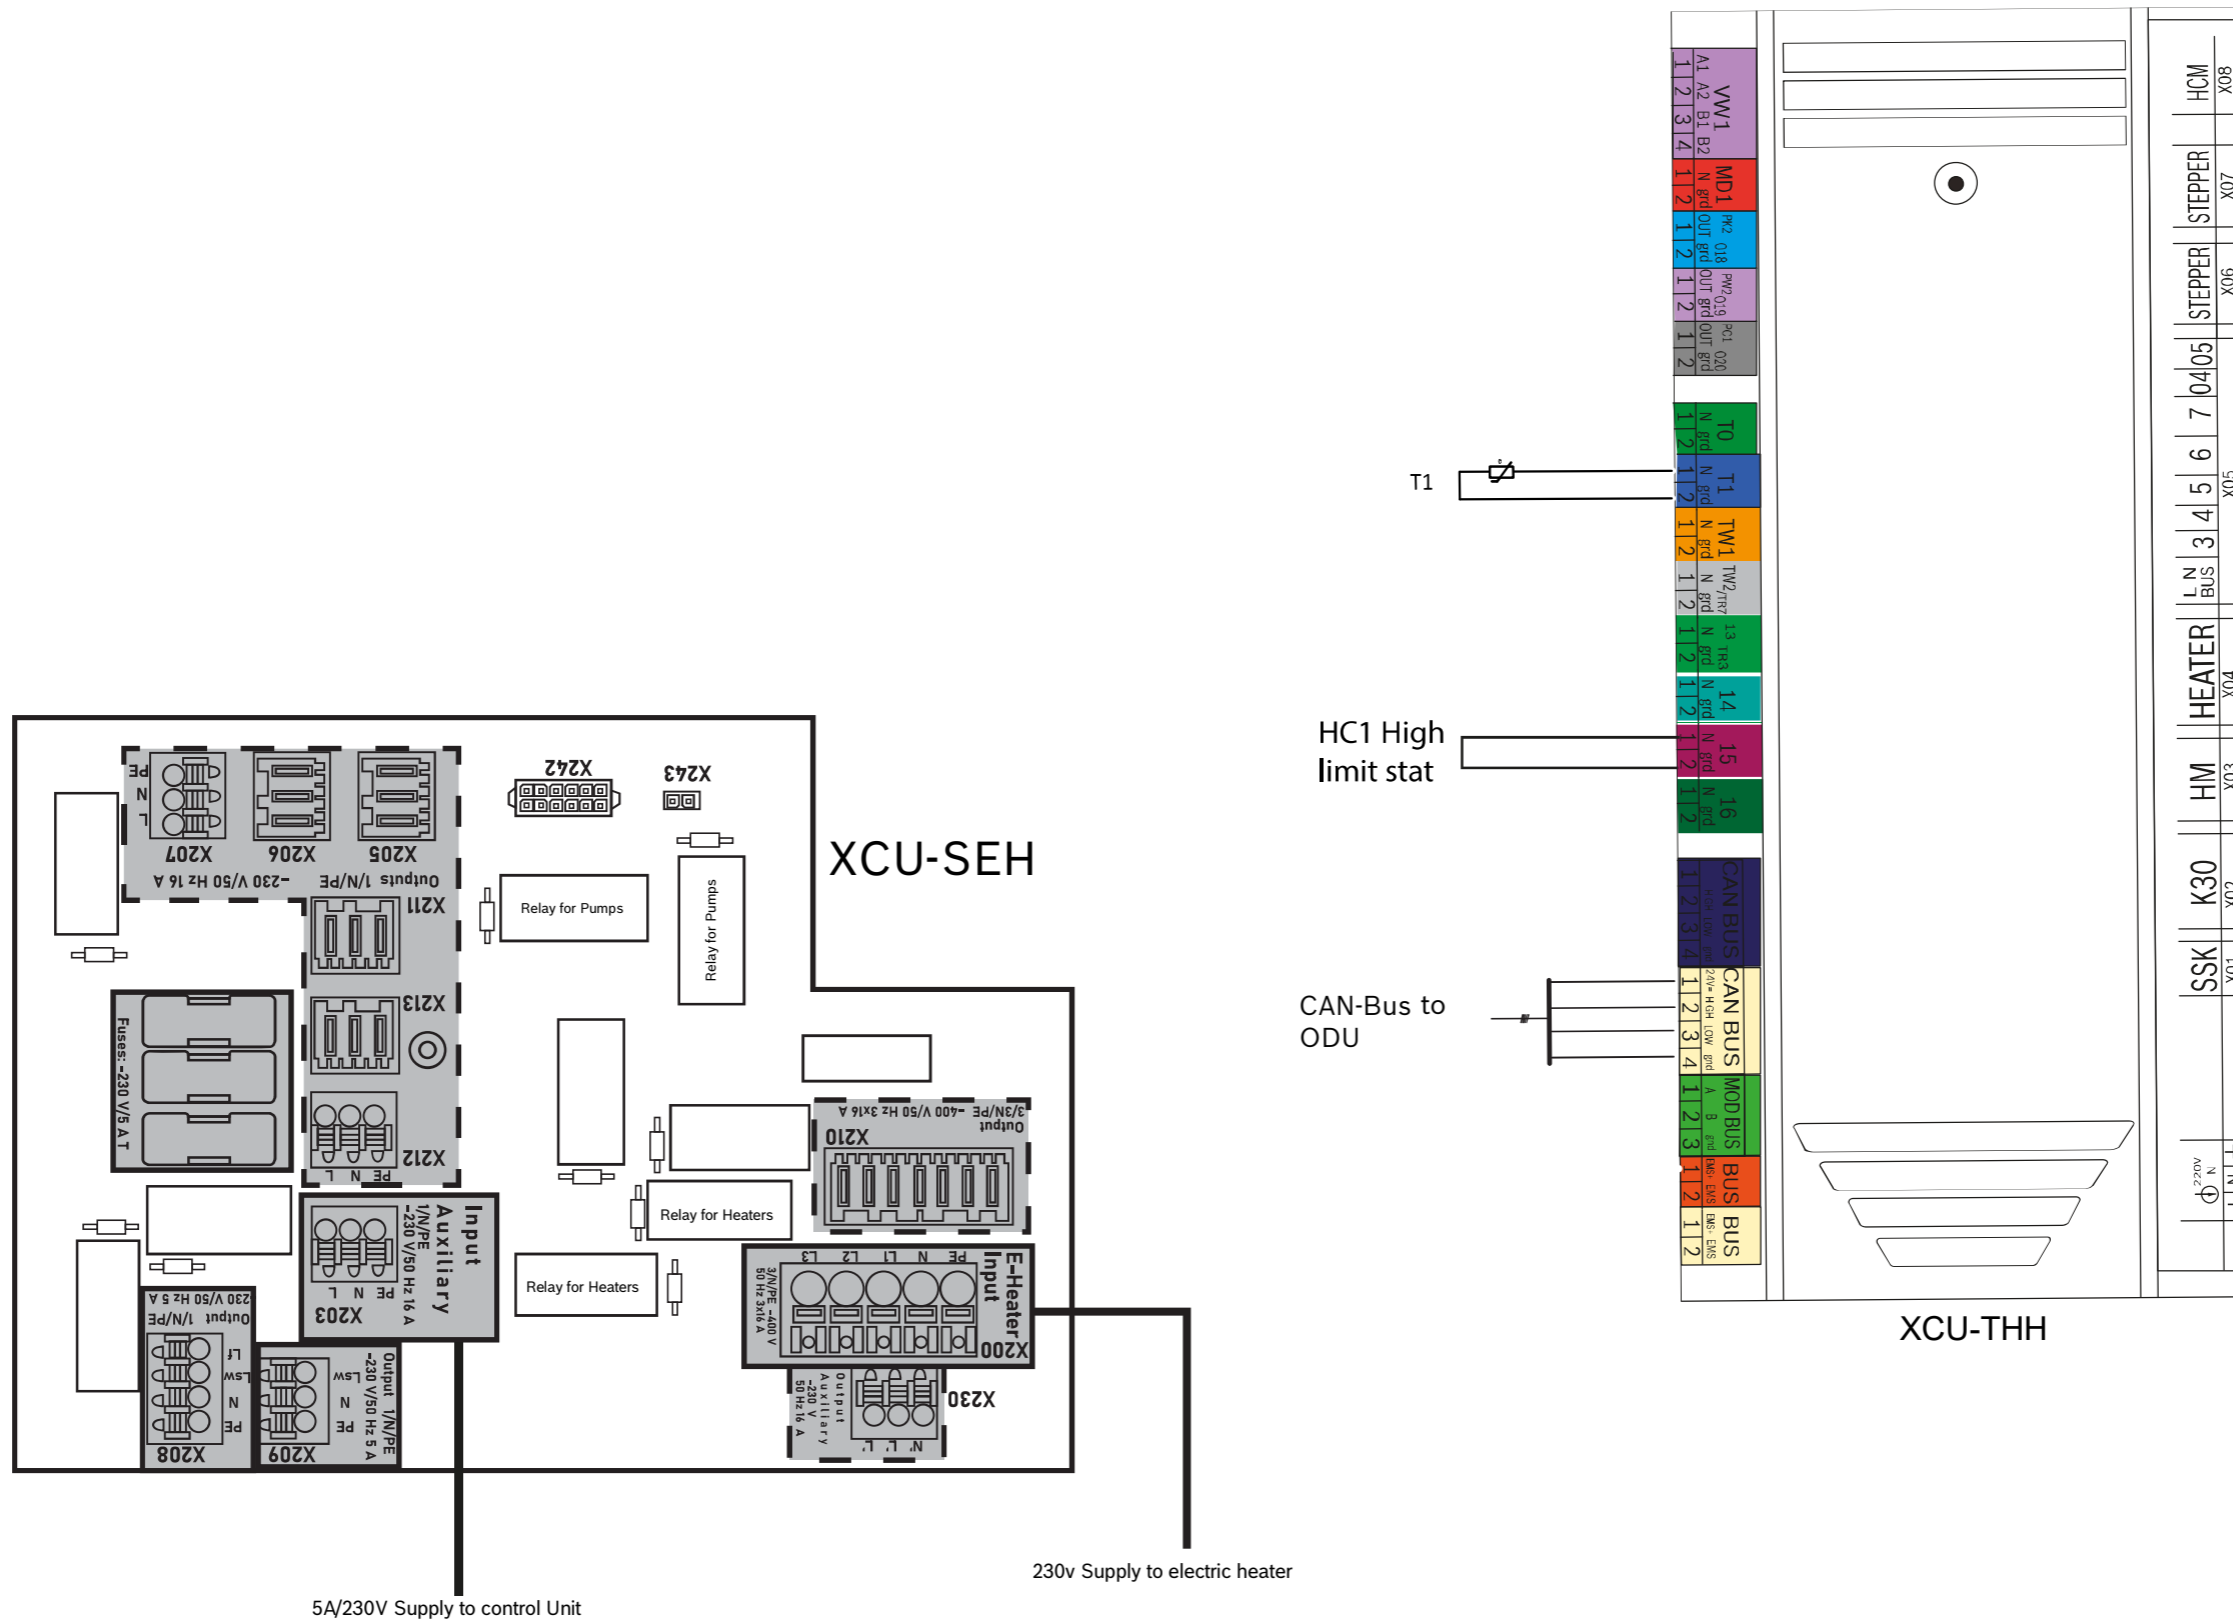








All electrical work should be carried out by a registered engineer. Wiring must comply with the latest IET wiring regulations.

Isolate the mains electricity supply before starting any work and observe all relevant safety precautions. Refer to all relevant product installation manuals for safety and installation instructions.


Whilst it is always our intention to fully assist, it is essential to recognise that all information given by the company is provided in good faith and based upon the information available. Connection labels may not match those of the products installed on site. We recommend that advice should always be checked with your installer, electrician or the manufacturer of the product in question. Consequently, the company cannot be held responsible for any liability relating to the use or repetition of such information or part thereof. In addition, whilst making every reasonable effort to monitor the performance and quality of our supply, installation and service network, we do not accept responsibility for the workmanship or operation of any third party company.

For further information or assistance please contact:  
Email: [system.design@uk.bosch.com](mailto:system.design@uk.bosch.com) Tel: 01905751464



Key	Description
	T1 sensor
	Isolation valve
	Drain off valve
	Magnetic filter
	Optional CR20RF
	Pump
	K30 key

Central Heating expansion not supplied with Unit

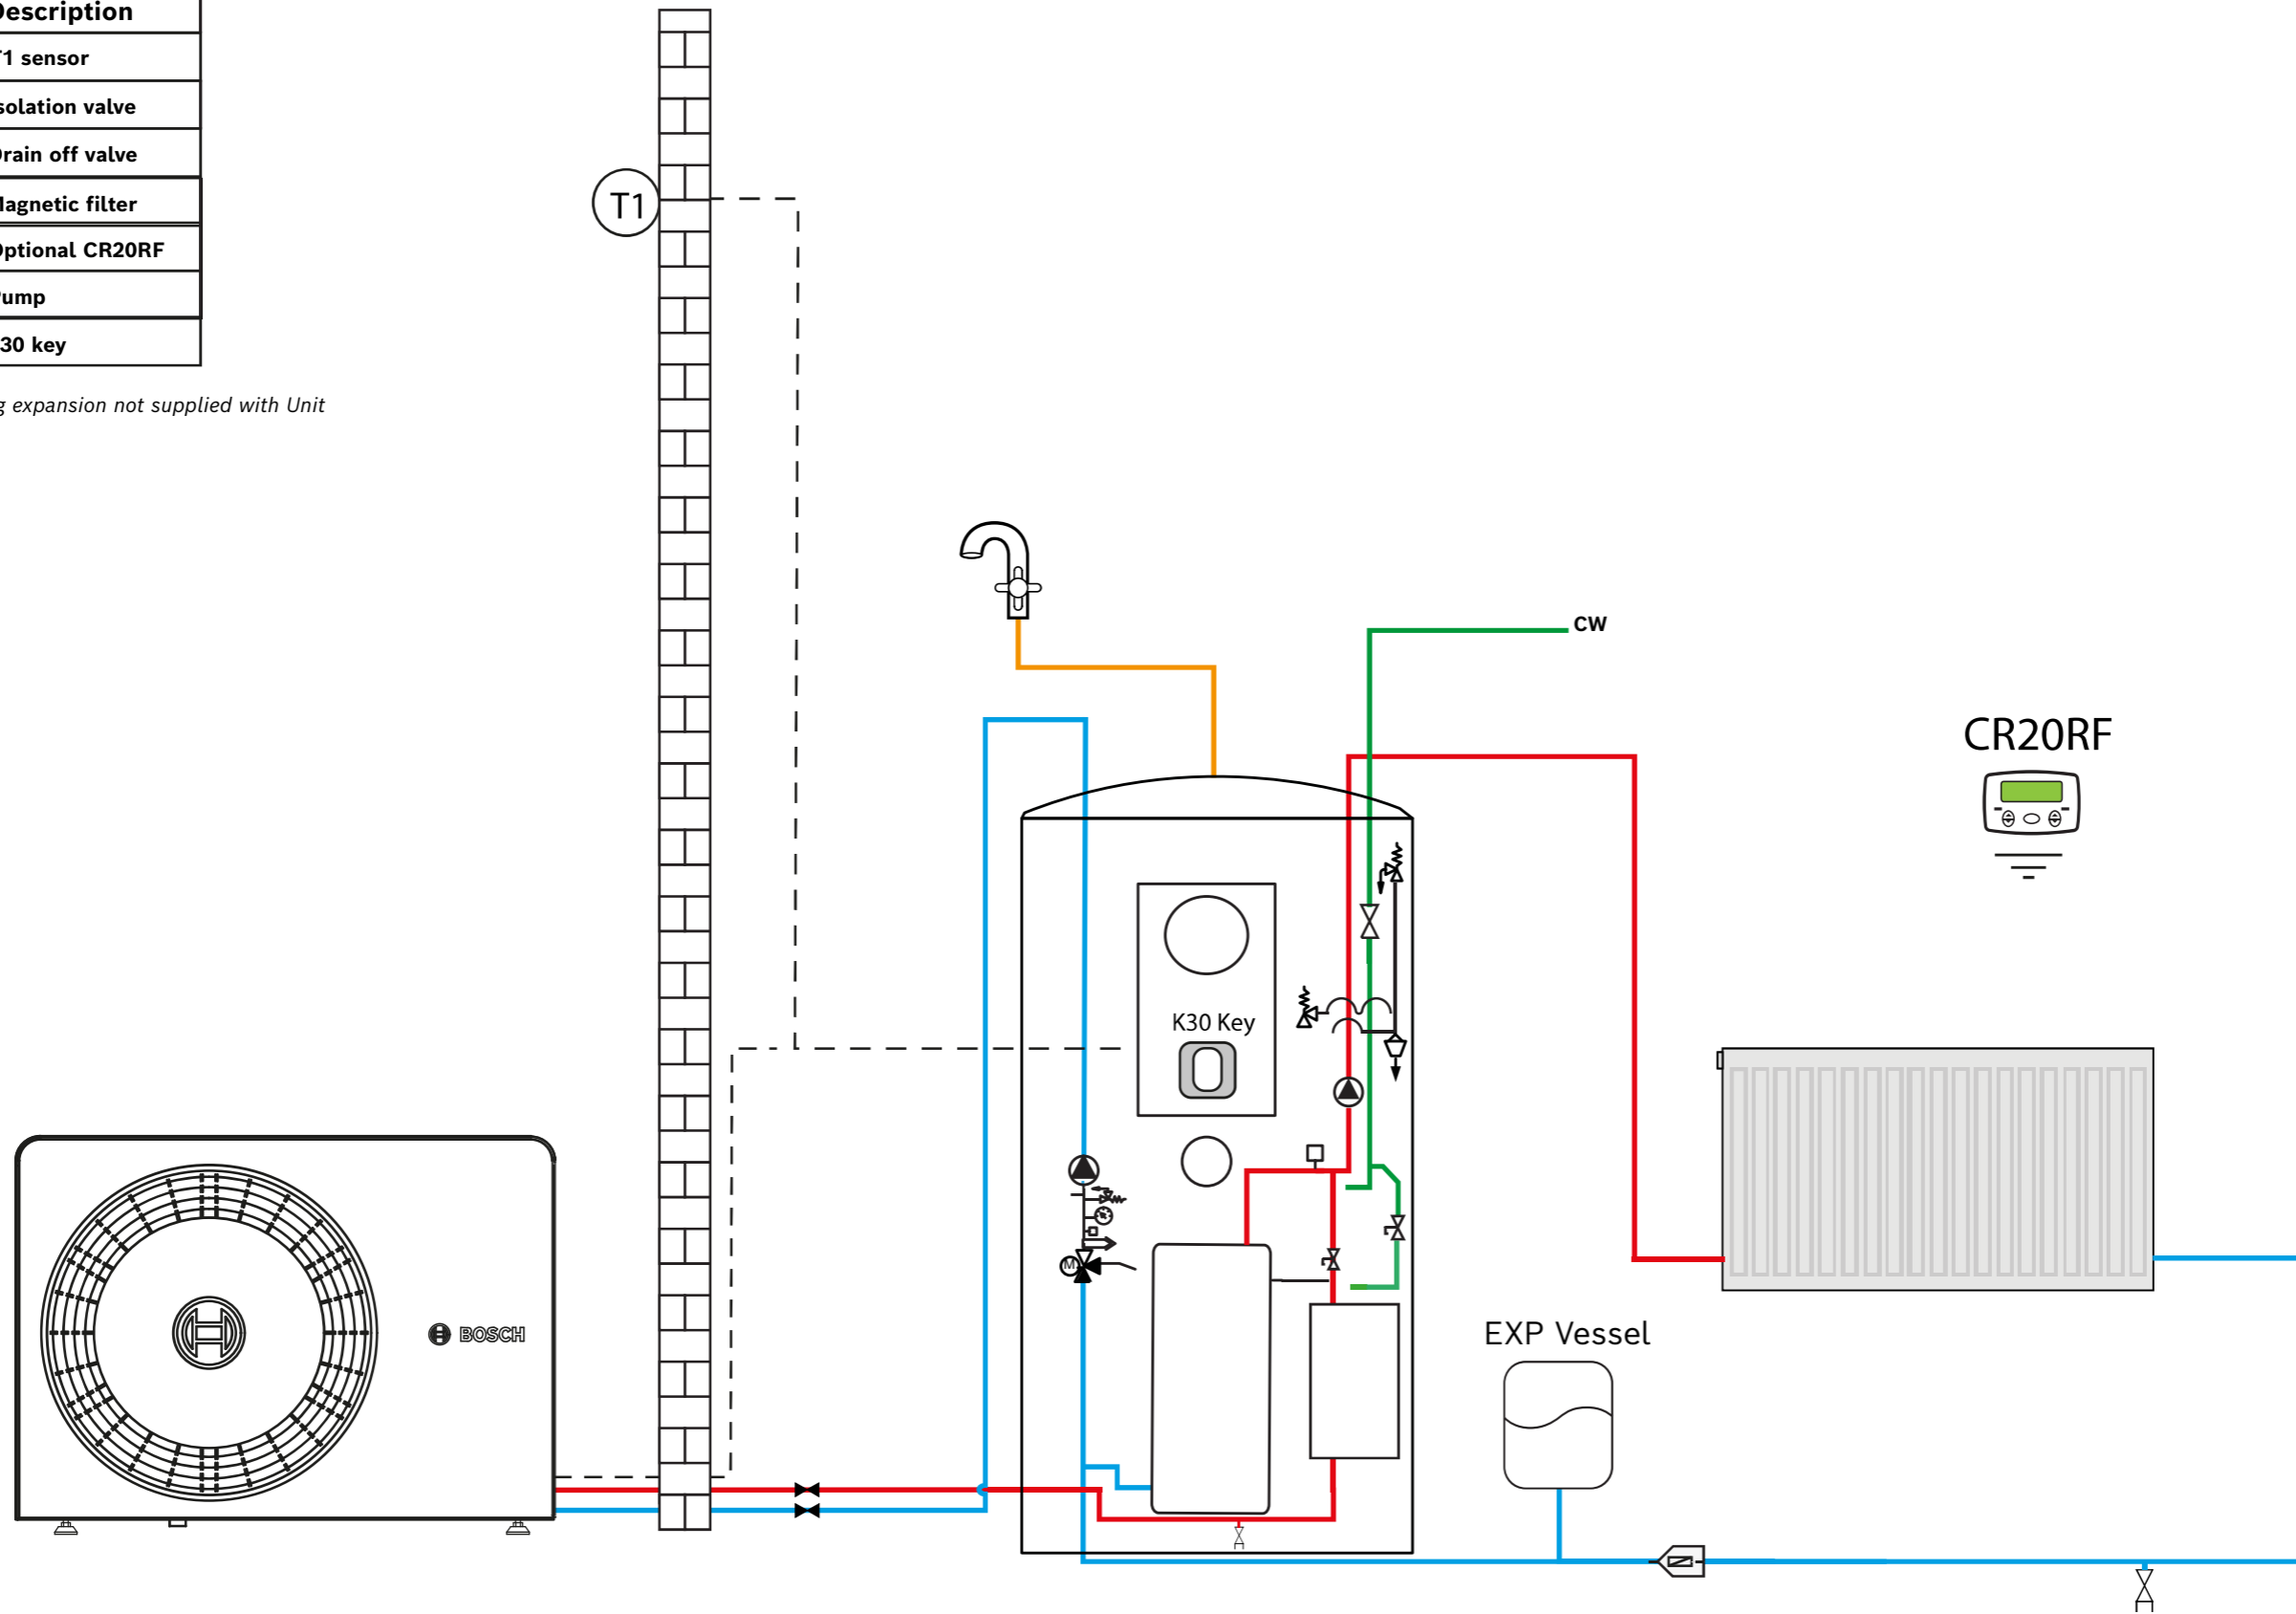

All electrical work should be carried out by a registered engineer. Wiring must comply with the latest IET wiring regulations.







 




Isolate the mains electricity supply before starting any work and observe all relevant safety precautions. Refer to all relevant product installation manuals for safety and installation instructions.


Whilst it is always our intention to fully assist, it is essential to recognise that all information given by the company is provided in good faith and based upon the information available. Connection labels may not match those of the products installed on site. We recommend that advice should always be checked with your installer, electrician or the manufacturer of the product in question. Consequently, the company cannot be held responsible for any liability relating to the use or repetition of such information or part thereof. In addition, whilst making every reasonable effort to monitor the performance and quality of our supply, installation and service network, we do not accept responsibility for the workmanship or operation of any third party company.

For further information or assistance please contact:

Email: [system.design@uk.bosch.com](mailto:system.design@uk.bosch.com) Tel: 01905751464



Key	Description
	T1 sensor
	Isolation valve
	Drain off valve
	Magnetic filter
	Pump
	High limit stat
	Two port valve
	Third party mixer valve
	Flow sensor
	3rd party controls
	3rd party wiring centre

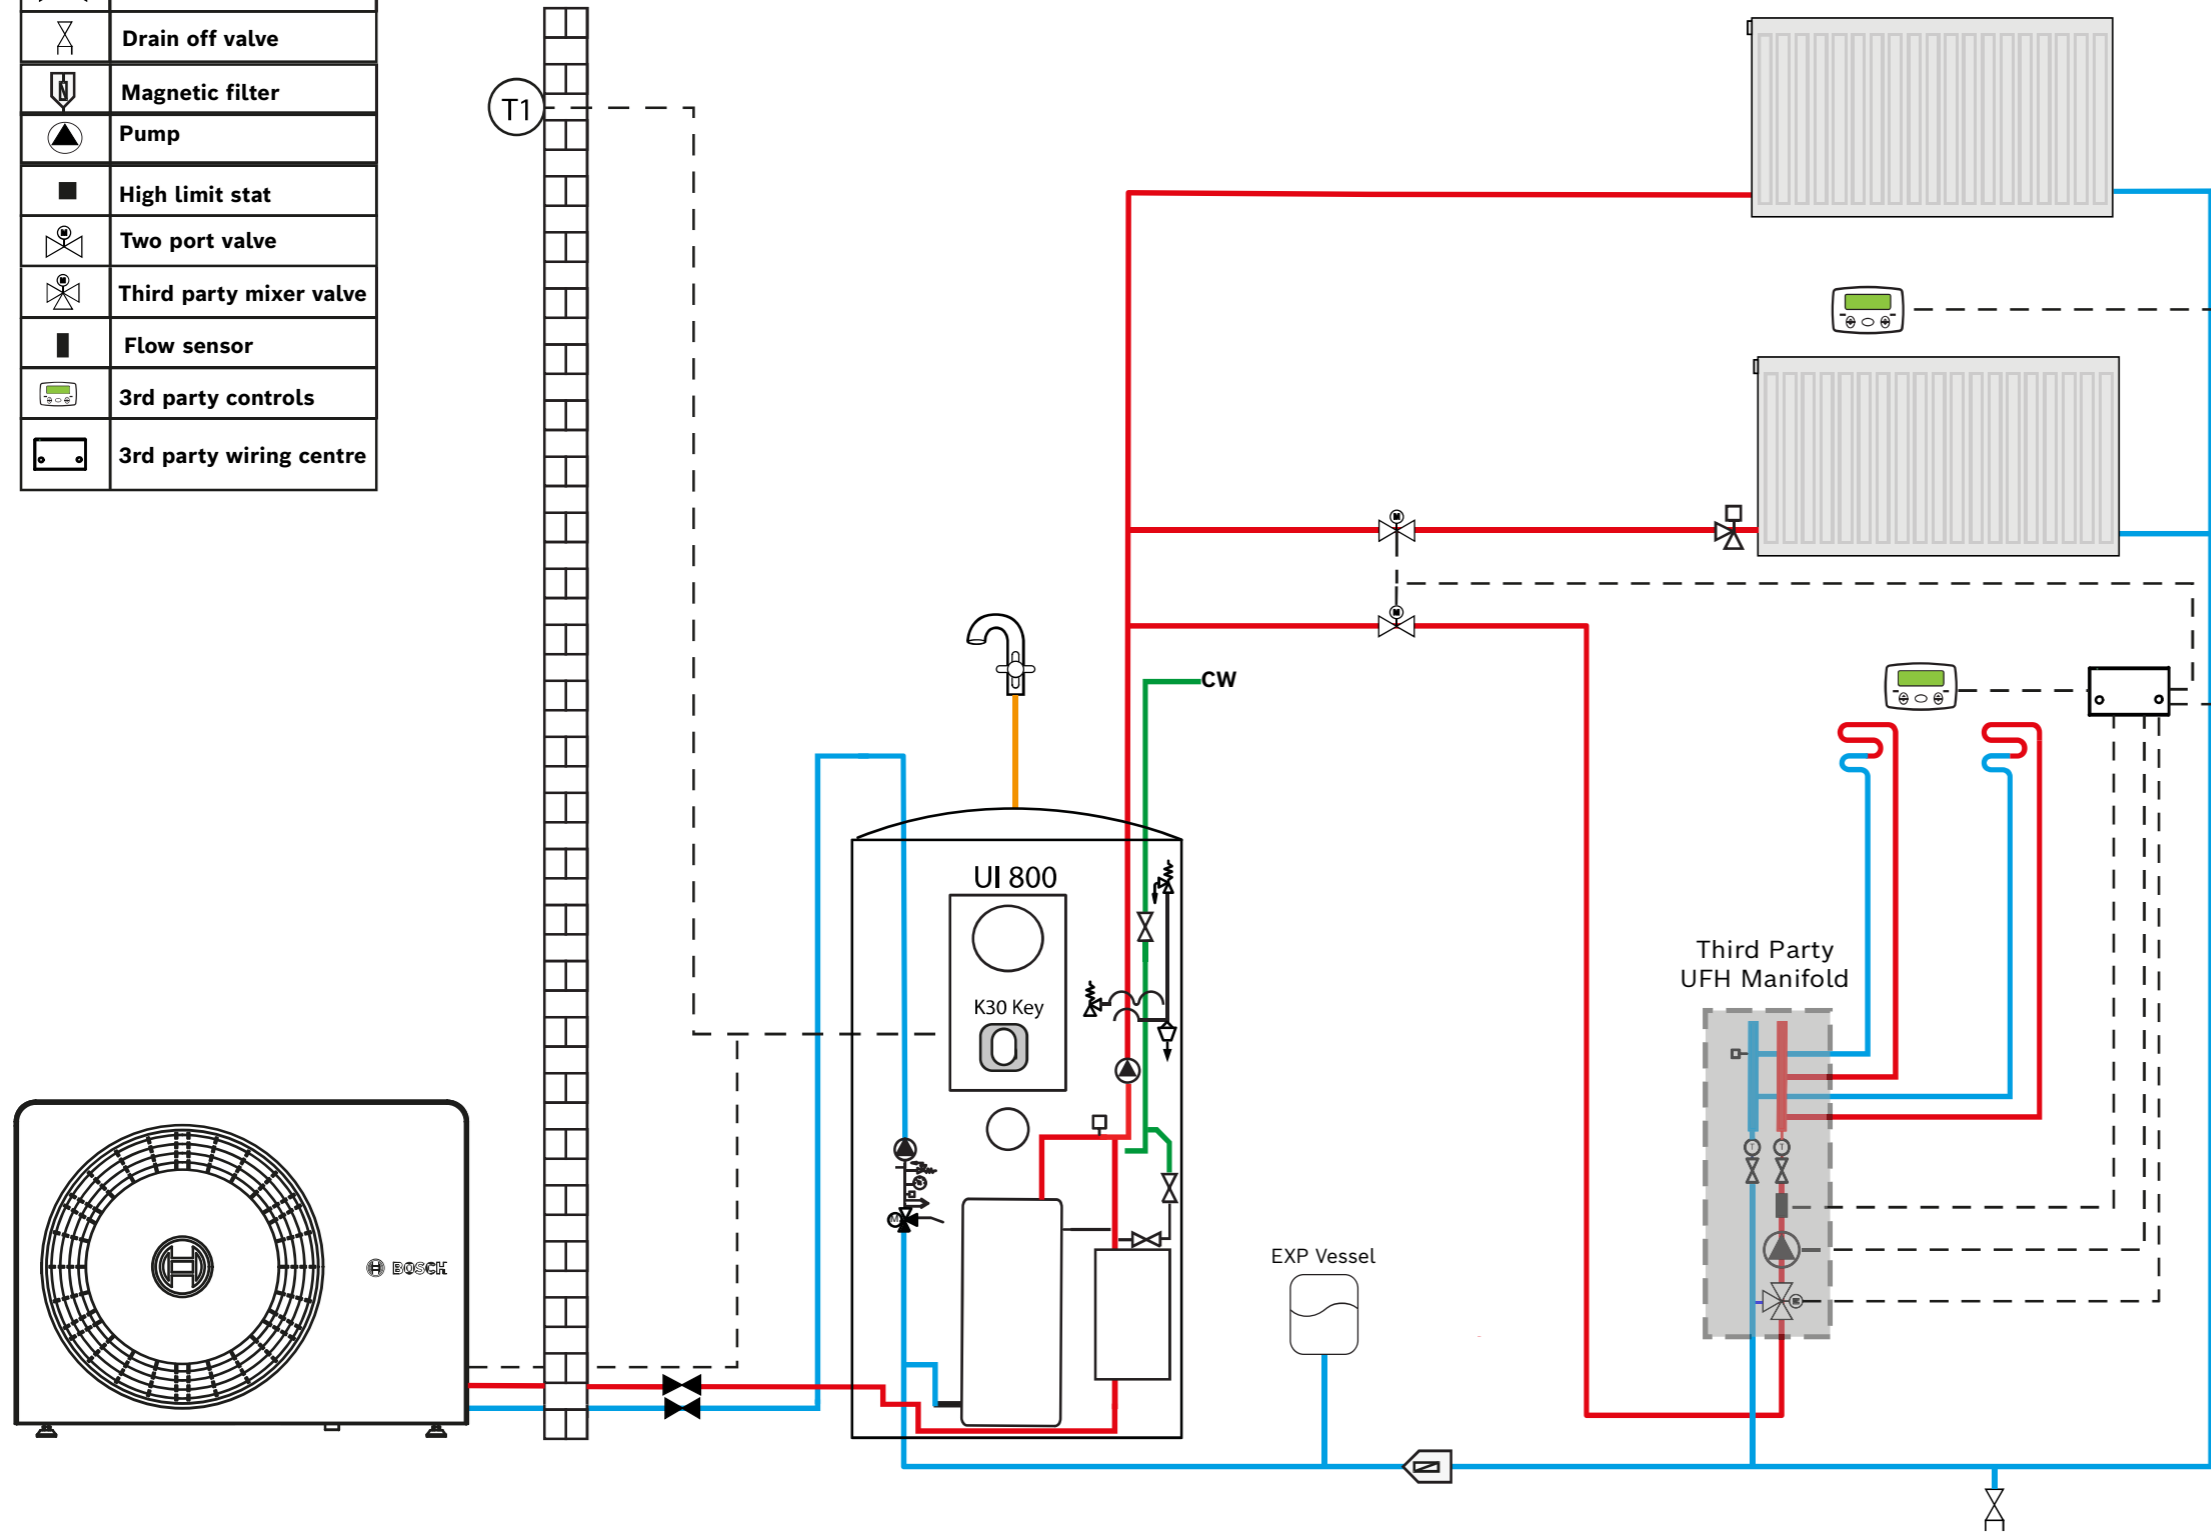


All electrical work should be carried out by a registered engineer. Wiring must comply with the latest IET wiring regulations.

Isolate the mains electricity supply before starting any work and observe all relevant safety precautions. Refer to all relevant product installation manuals for safety and installation instructions.

Whilst it is always our intention to fully assist, it is essential to recognise that all information given by the company is provided in good faith and based upon the information available. Connection labels may not match those of the products installed on site. We recommend that advice should always be checked with your installer, electrician or the manufacturer of the product in question. Consequently, the company cannot be held responsible for any liability relating to the use or repetition of such information or part thereof. In addition, whilst making every reasonable effort to monitor the performance and quality of our supply, installation and service network, we do not accept responsibility for the workmanship or operation of any third party company.

For further information or assistance please contact:  
 Email: [system.design@uk.bosch.com](mailto:system.design@uk.bosch.com) Tel: 01905751464

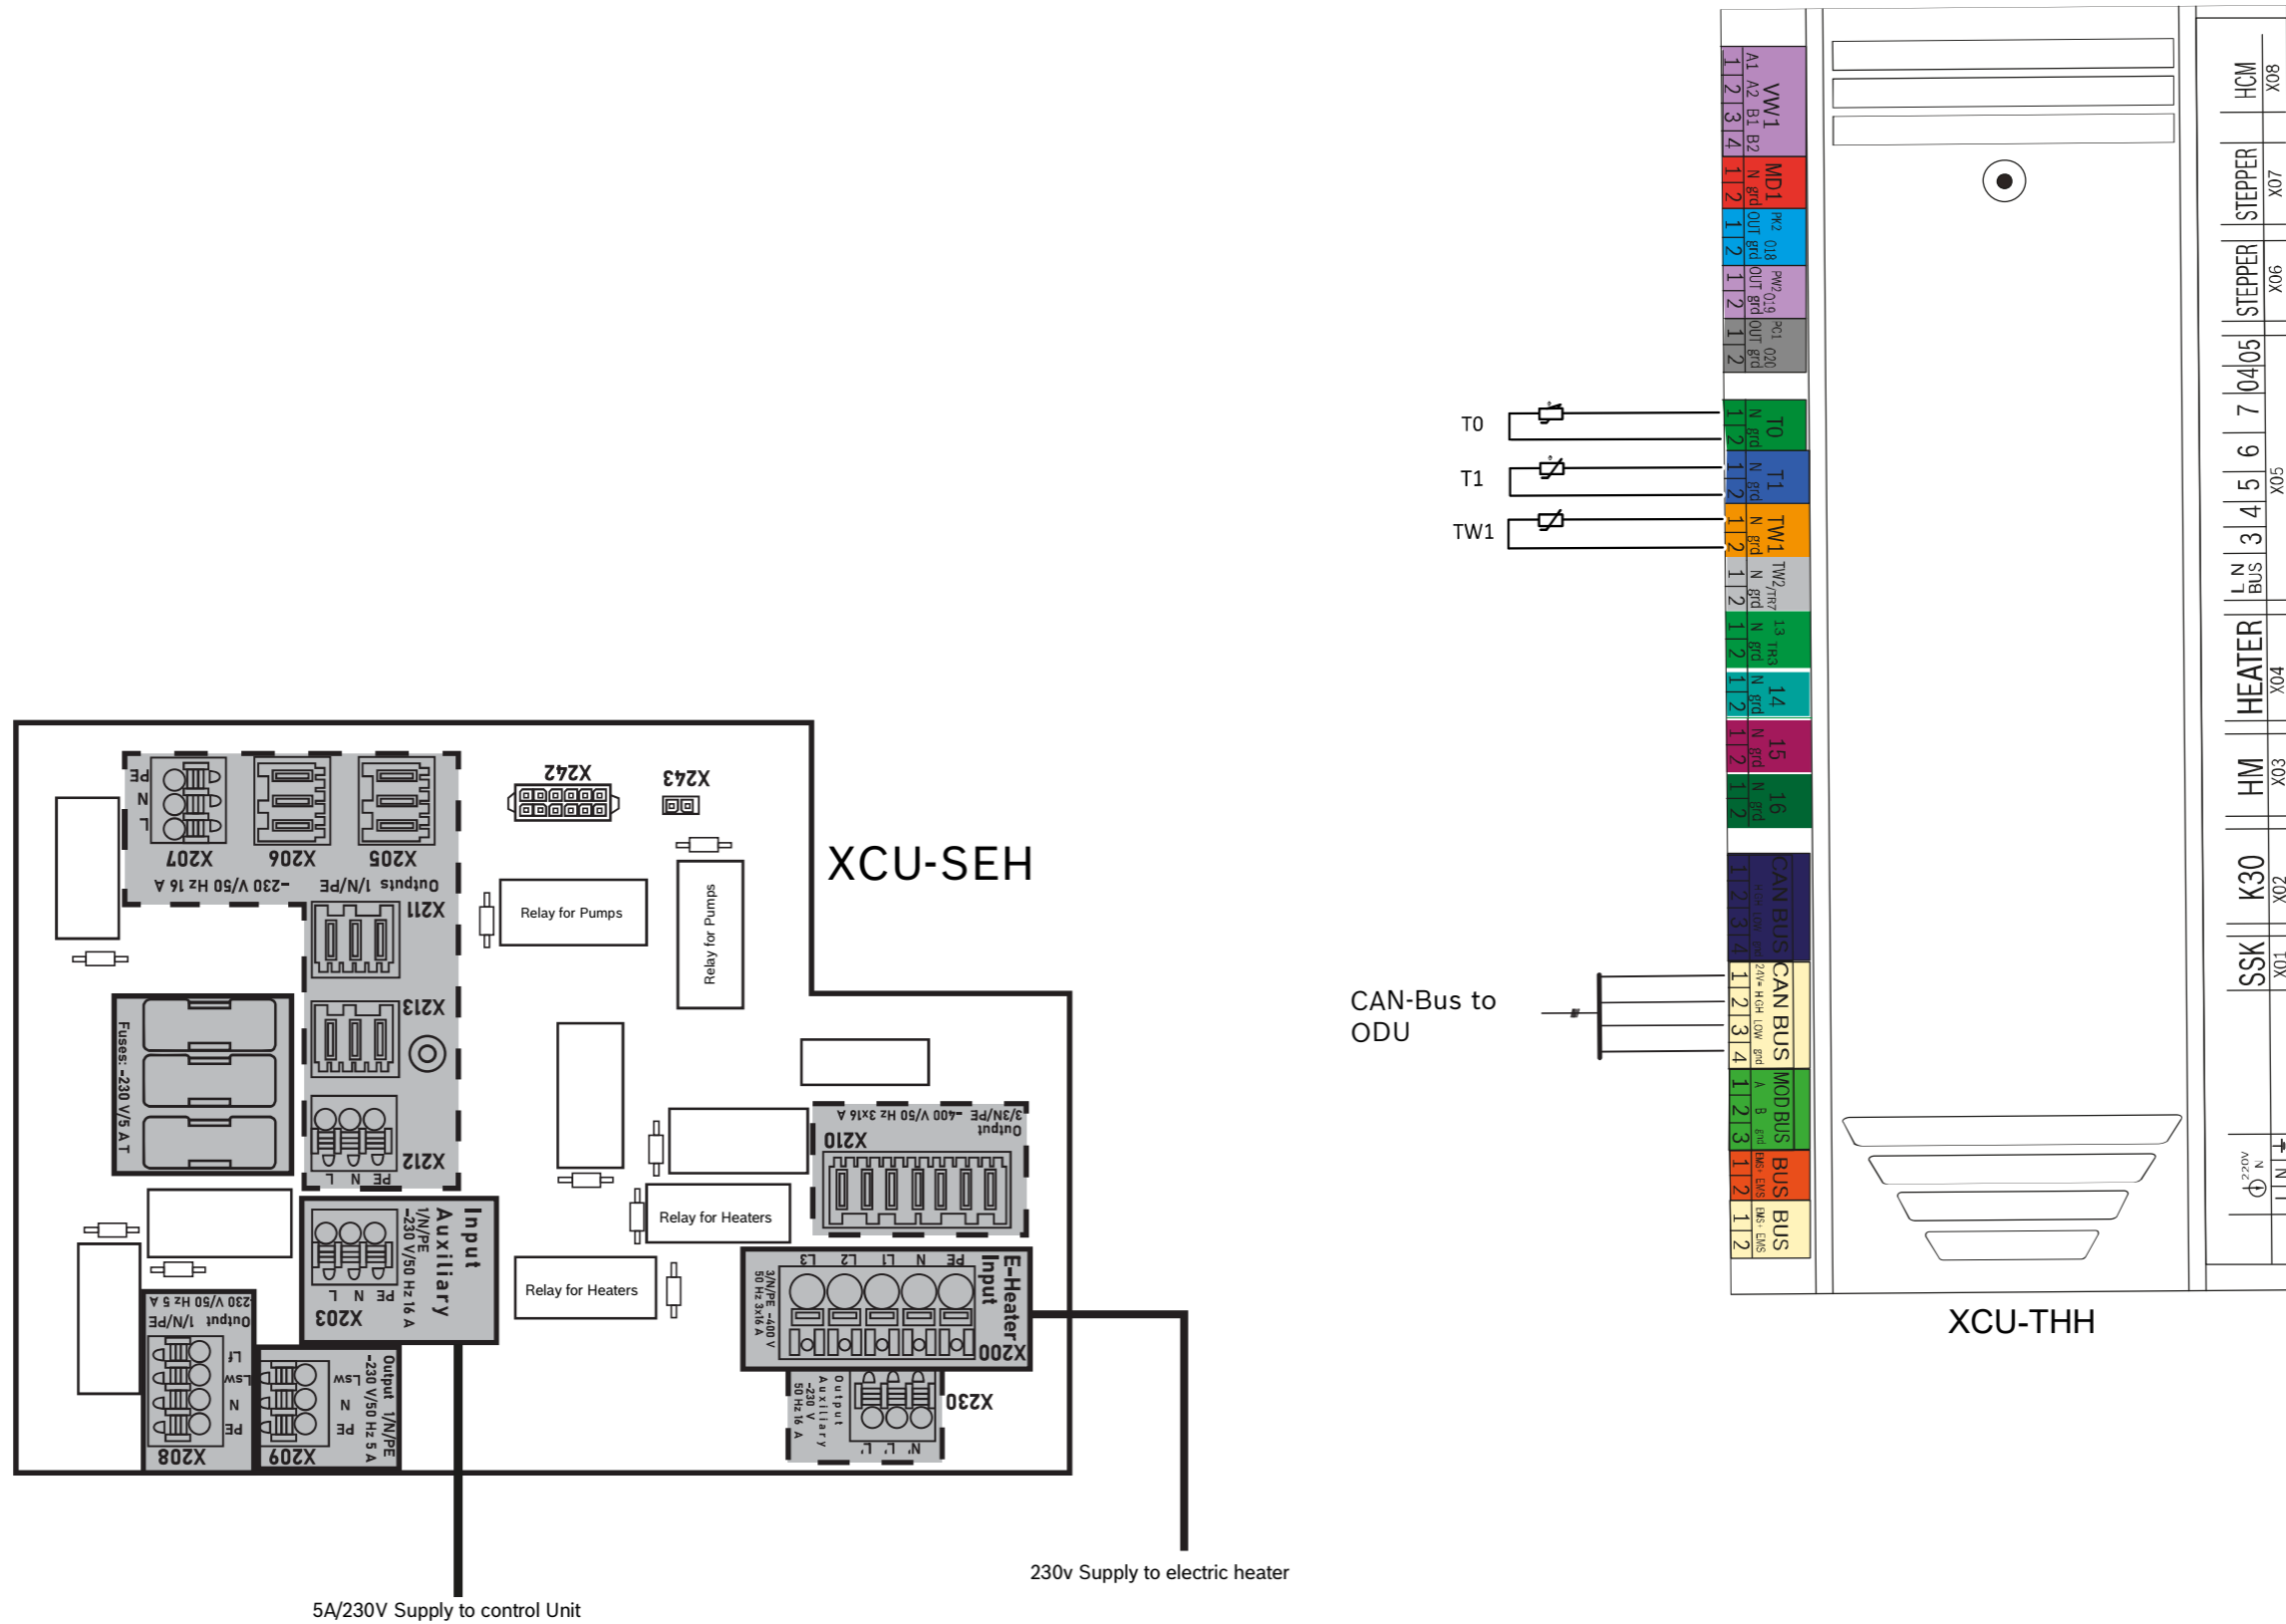

All electrical work should be carried out by a registered engineer. Wiring must comply with the latest IET wiring regulations.

Isolate the mains electricity supply before starting any work and observe all relevant safety precautions. Refer to all relevant product installation manuals for safety and installation instructions.







 

Whilst it is always our intention to fully assist, it is essential to recognise that all information given by the company is provided in good faith and based upon the information available. Connection labels may not match those of the products installed on site. We recommend that advice should always be checked with your installer, electrician or the manufacturer of the product in question. Consequently, the company cannot be held responsible for any liability relating to the use or repetition of such information or part thereof. In addition, whilst making every reasonable effort to monitor the performance and quality of our supply, installation and service network, we do not accept responsibility for the workmanship or operation of any third party company.


For further information or assistance please contact:

Email: [system.design@uk.bosch.com](mailto:system.design@uk.bosch.com) Tel: 01905751464





Key	Description
	T1 sensor
	Isolation valve
	Drain off valve
	Magnetic filter
	Pump
	Two port valve
	3rd party controls
	3rd party wiring centre

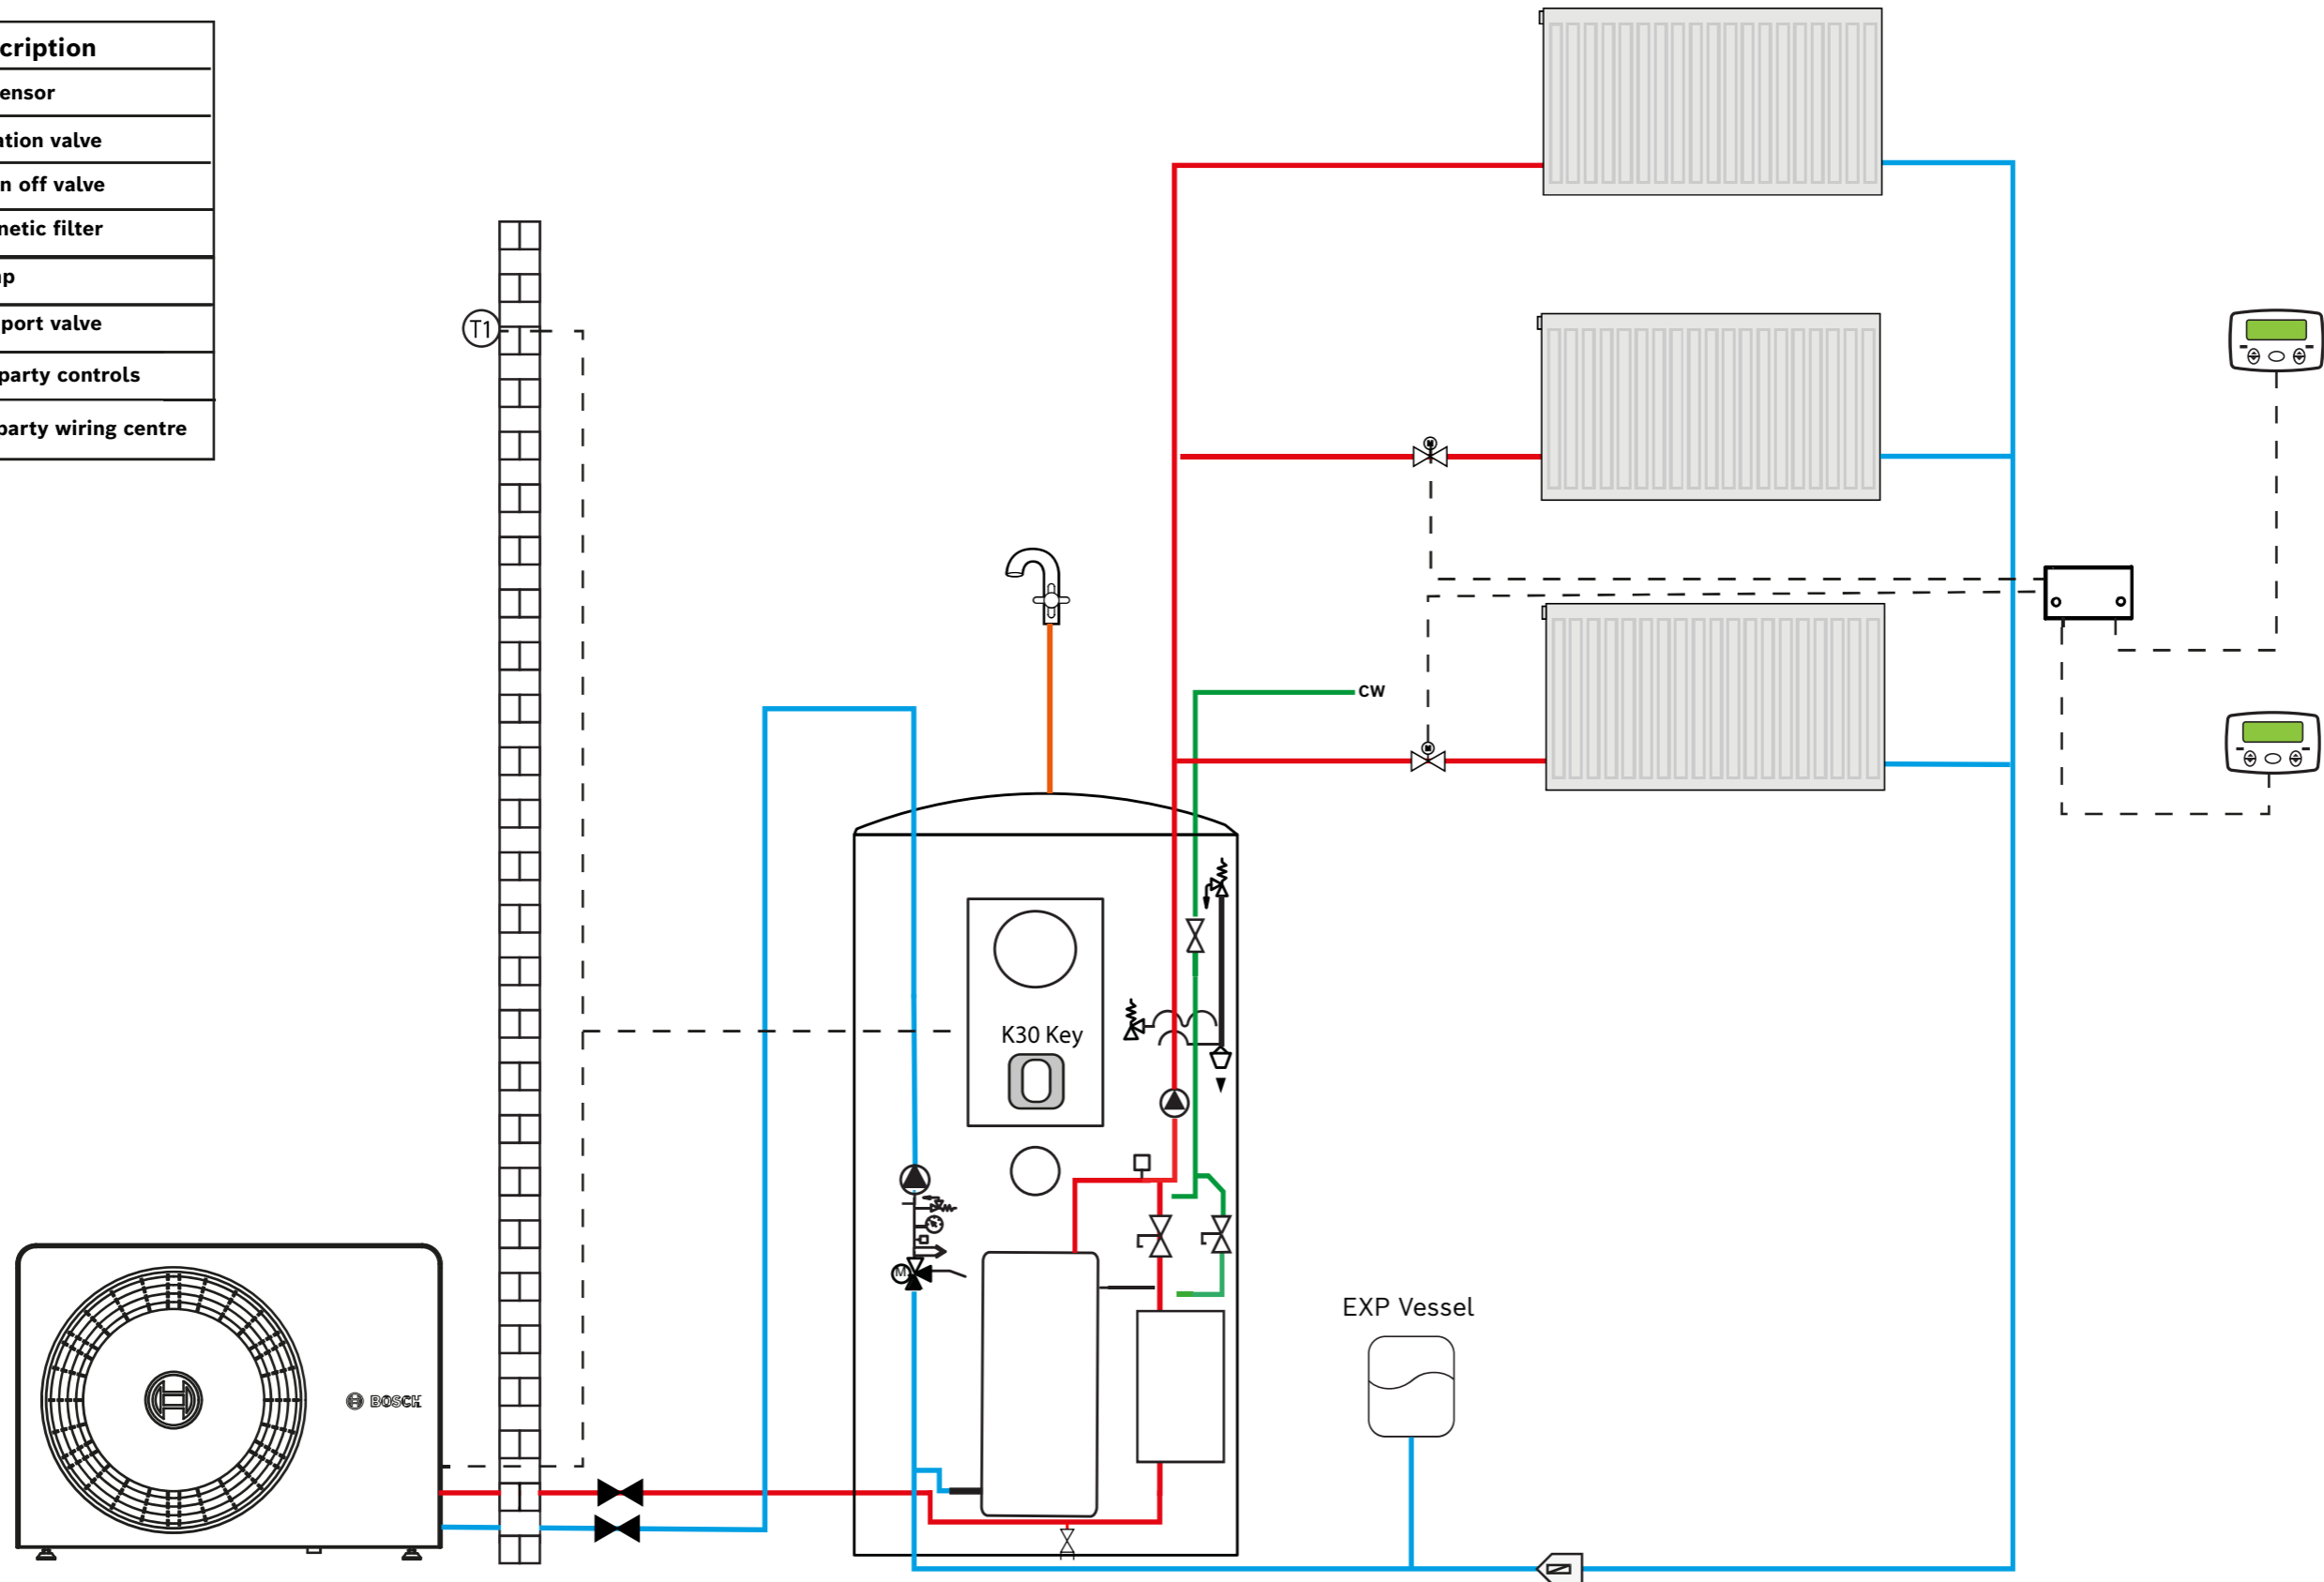

All electrical work should be carried out by a registered engineer. Wiring must comply with the latest IET wiring regulations.


Isolate the mains electricity supply before starting any work and observe all relevant safety precautions. Refer to all relevant product installation manuals for safety and installation instructions.

Whilst it is always our intention to fully assist, it is essential to recognise that all information given by the company is provided in good faith and based upon the information available. Connection labels may not match those of the products installed on site. We recommend that advice should always be checked with your installer, electrician or the manufacturer of the product in question. Consequently, the company cannot be held responsible for any liability relating to the use or repetition of such information or part thereof. In addition, whilst making every reasonable effort to monitor the performance and quality of our supply, installation and service network, we do not accept responsibility for the workmanship or operation of any third party company.

For further information or assistance please contact:  
 Email: [system.design@uk.bosch.com](mailto:system.design@uk.bosch.com) Tel: 01905751464




Key	Description
1	EMS Accessory
T1	Outdoor Temp Sensor

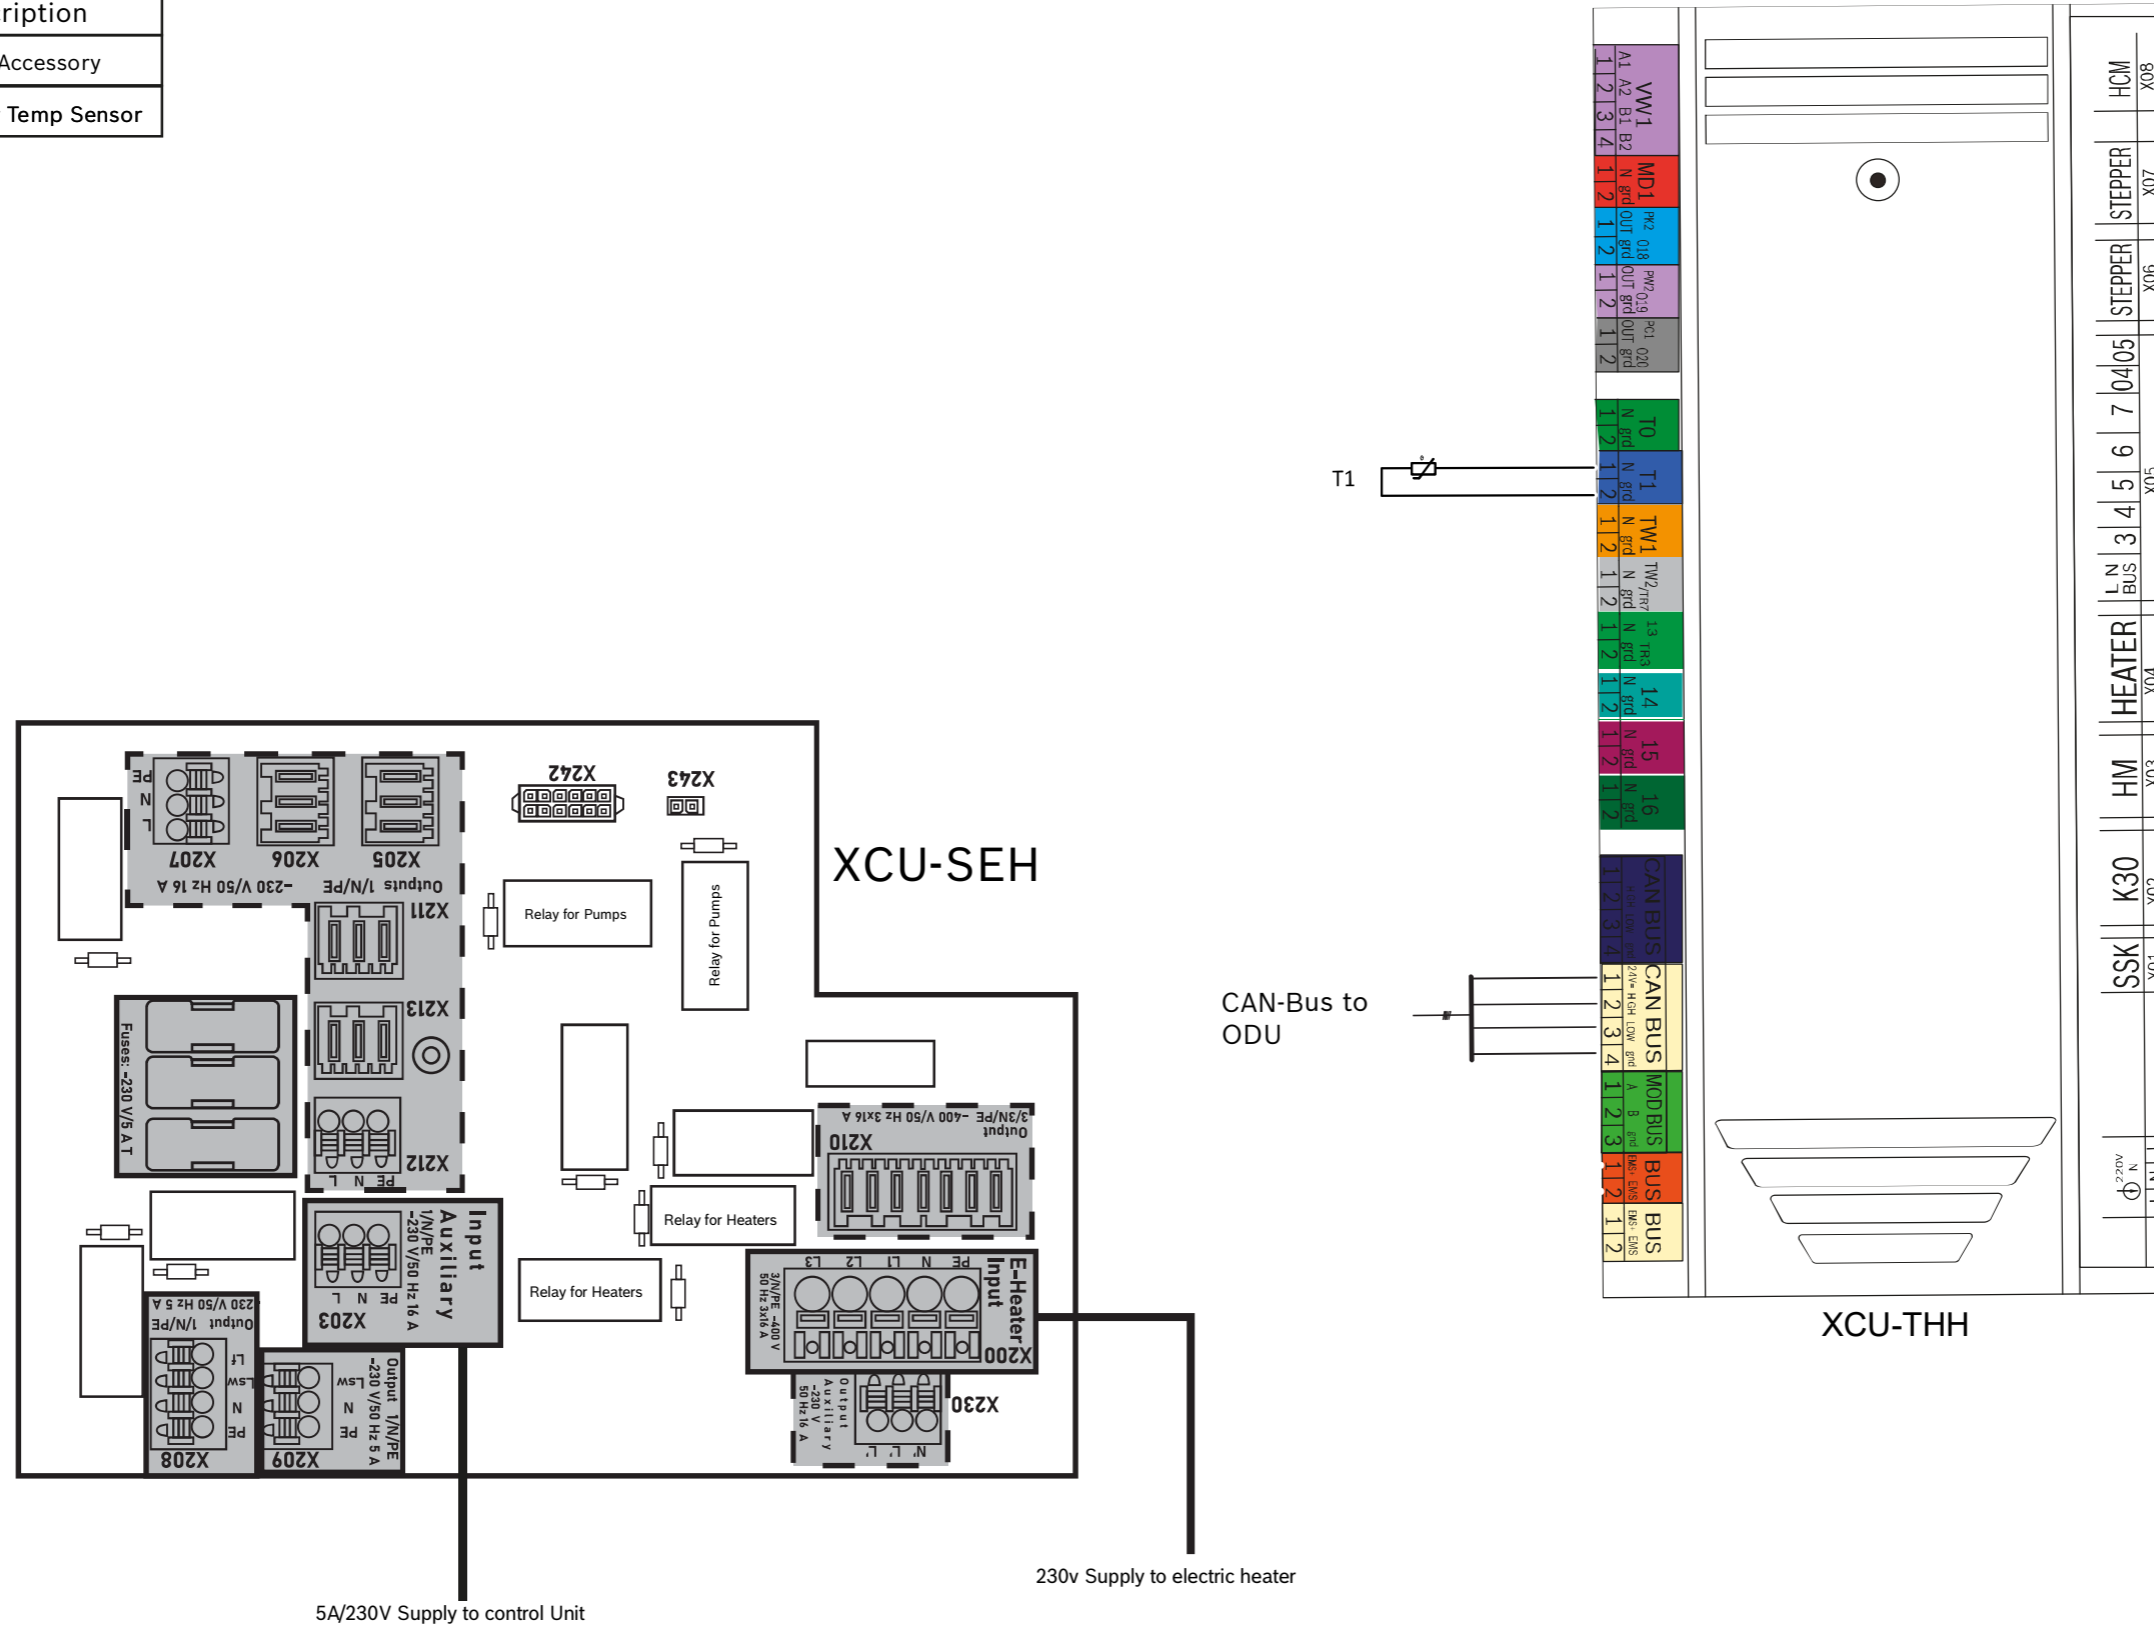

All electrical work should be carried out by a registered engineer. Wiring must comply with the latest IET wiring regulations. Isolate the mains electricity supply before starting any work and observe all relevant safety precautions. Refer to all relevant product installation manuals for safety and installation instructions. Whilst it is always our intention to fully assist, it is essential to recognise that all information given by the company is provided in good faith and based upon the information available. Connection labels may not match those of the products installed on site. We recommend that advice should always be checked with your installer, electrician or the manufacturer of the product in question. Consequently, the company cannot be held responsible for any liability relating to the use or repetition of such information or part thereof. In addition, whilst making every reasonable effort to monitor the performance and quality of our supply, installation and service network, we do not accept responsibility for the workmanship or operation of any third party company.

Key	Description
	T1 sensor
	Isolation valve
	Drain off valve
	Filling valve
	Magnetic filter
	Non return valve
	Pump
	High limit stat
	Third party mixer valve
	Flow sensor

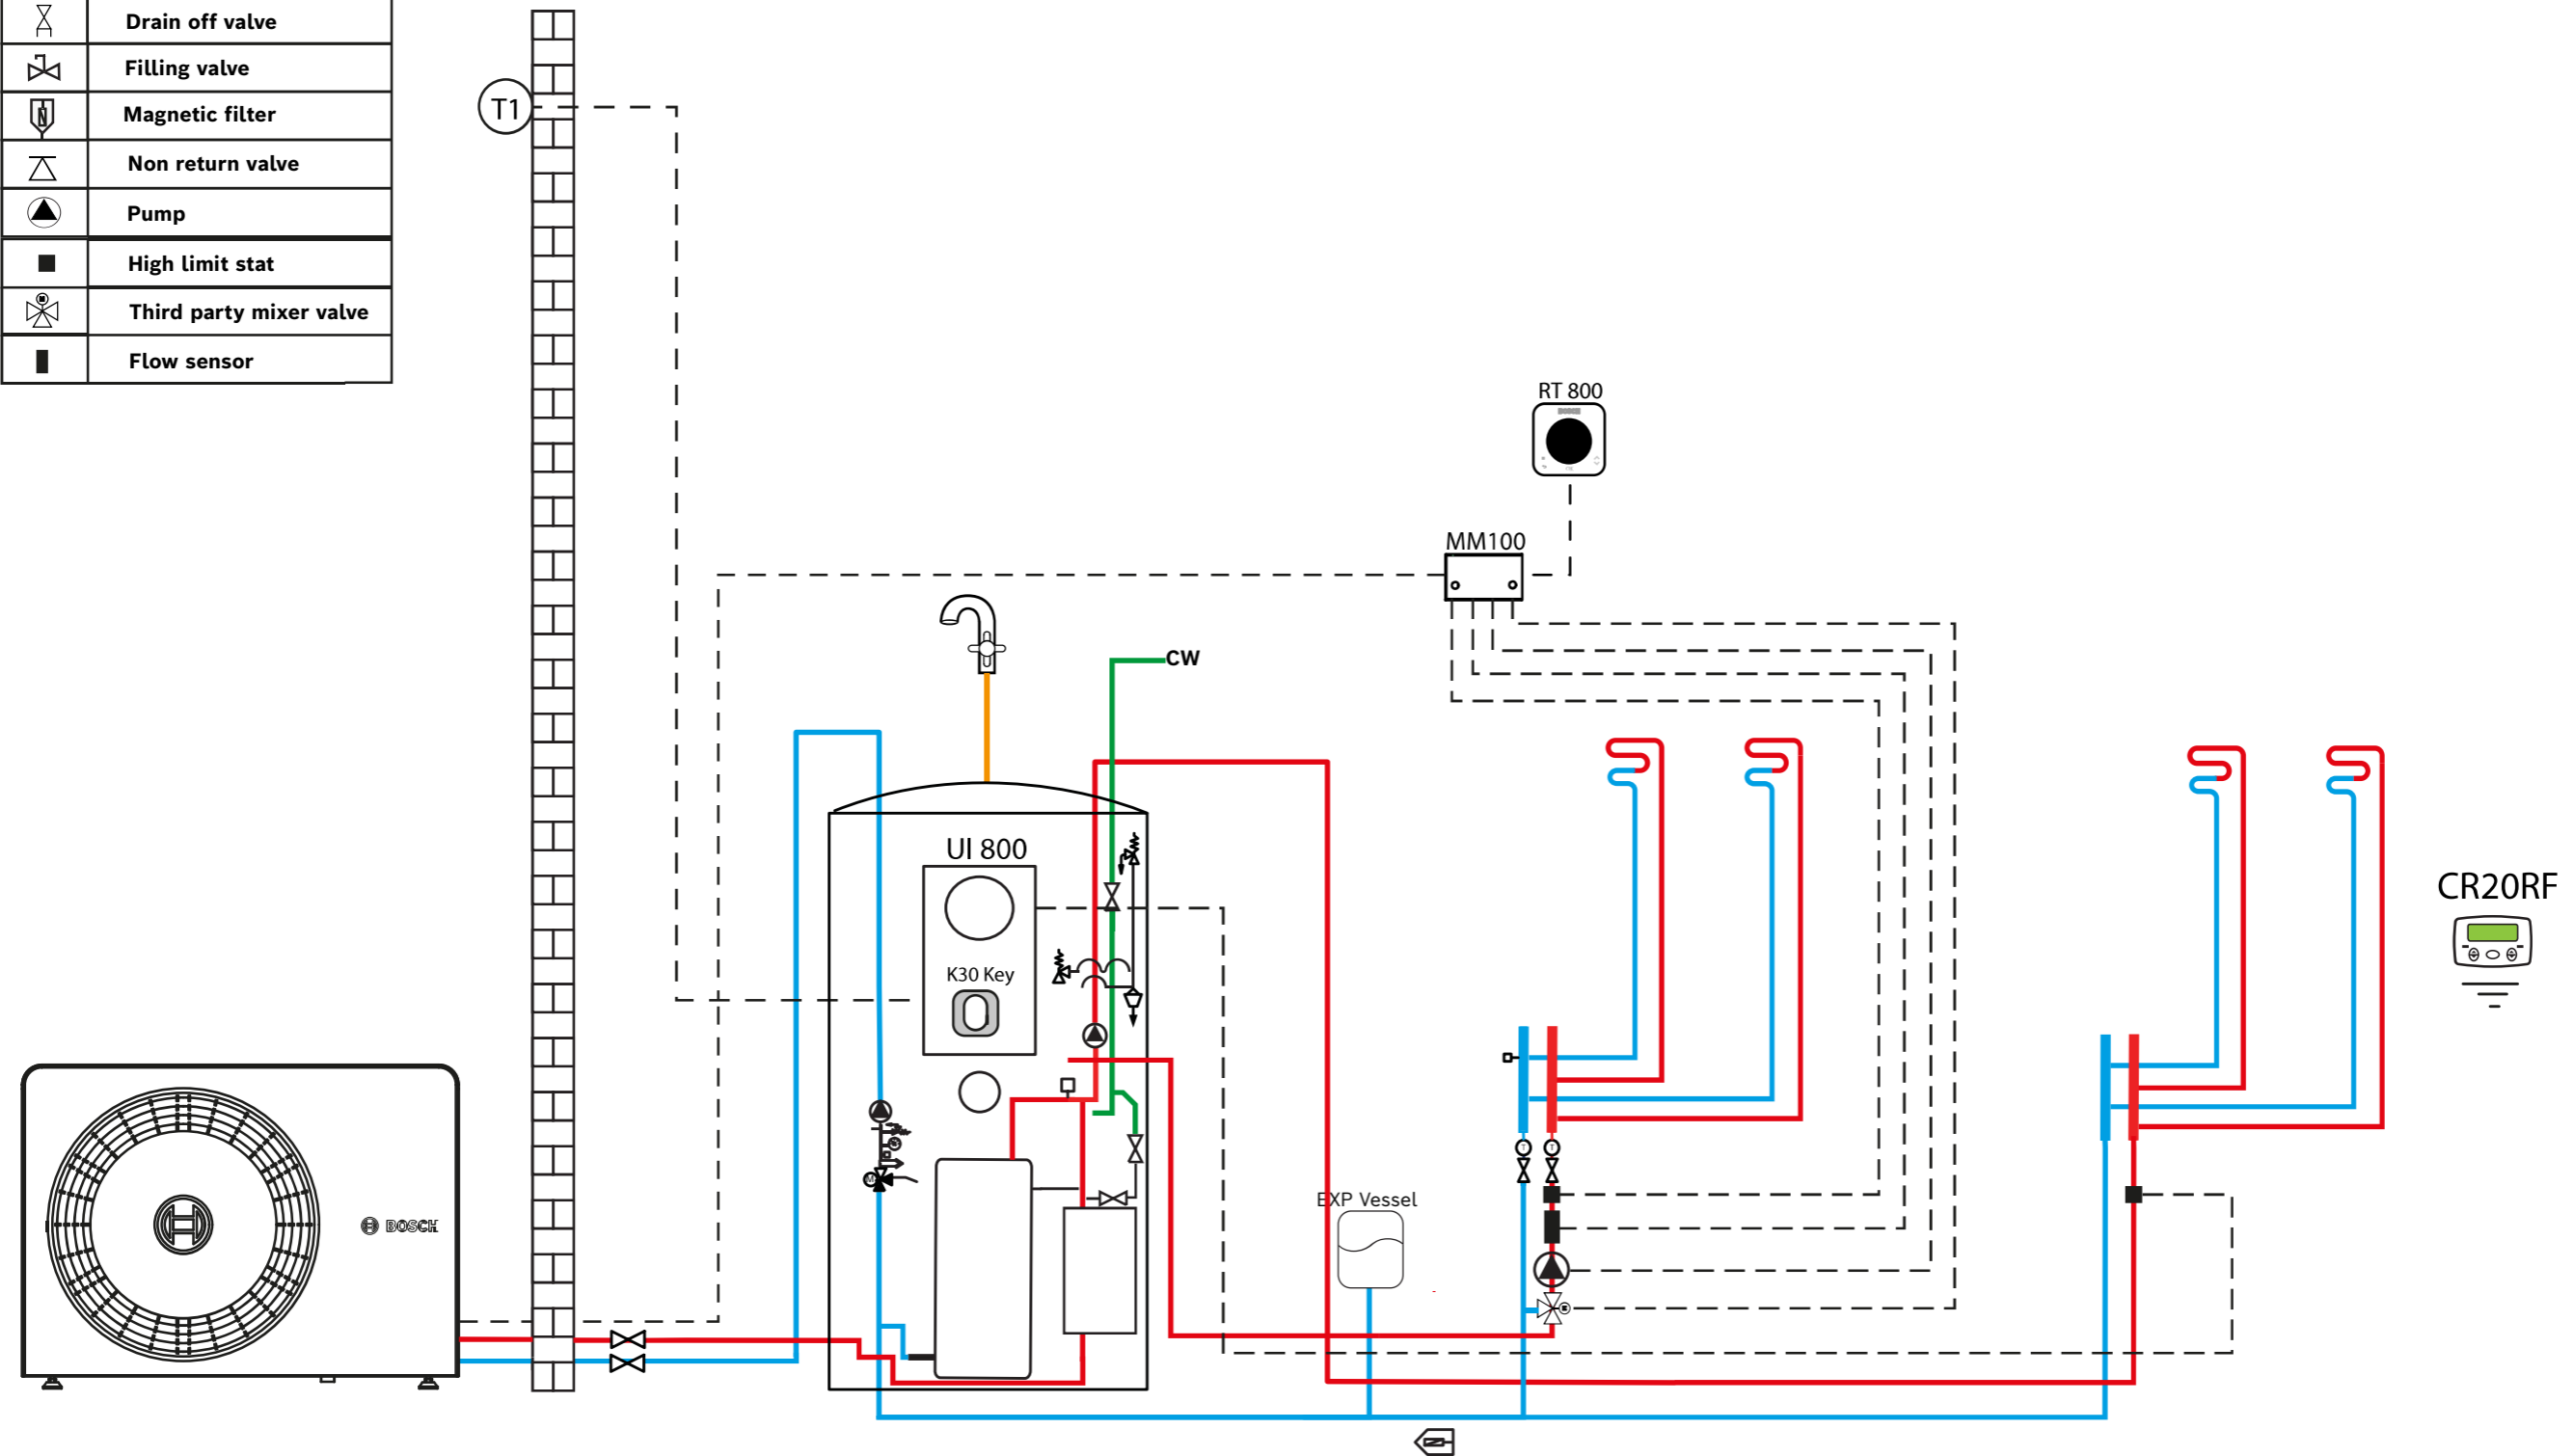

All electrical work should be carried out by a registered engineer. Wiring must comply with the latest IET wiring regulations.




Isolate the mains electricity supply before starting any work and observe all relevant safety precautions. Refer to all relevant product installation manuals for safety and installation instructions.

Whilst it is always our intention to fully assist, it is essential to recognise that all information given by the company is provided in good faith and based upon the information available. Connection labels may not match those of the products installed on site. We recommend that advice should always be checked with your installer, electrician or the manufacturer of the product in question. Consequently, the company cannot be held responsible for any liability relating to the use or repetition of such information or part thereof. In addition, whilst making every reasonable effort to monitor the performance and quality of our supply, installation and service network, we do not accept responsibility for the workmanship or operation of any third party company.

For further information or assistance please contact:  
 Email: [system.design@uk.bosch.com](mailto:system.design@uk.bosch.com) Tel: 01905751464



Key	Description
1	EMS Accessory
T1	Outdoor Temp Sensor
VC1	EMS Accessory
PC1	Canbus connection
TC1	Flow temp sensor
MC1	High limit stat

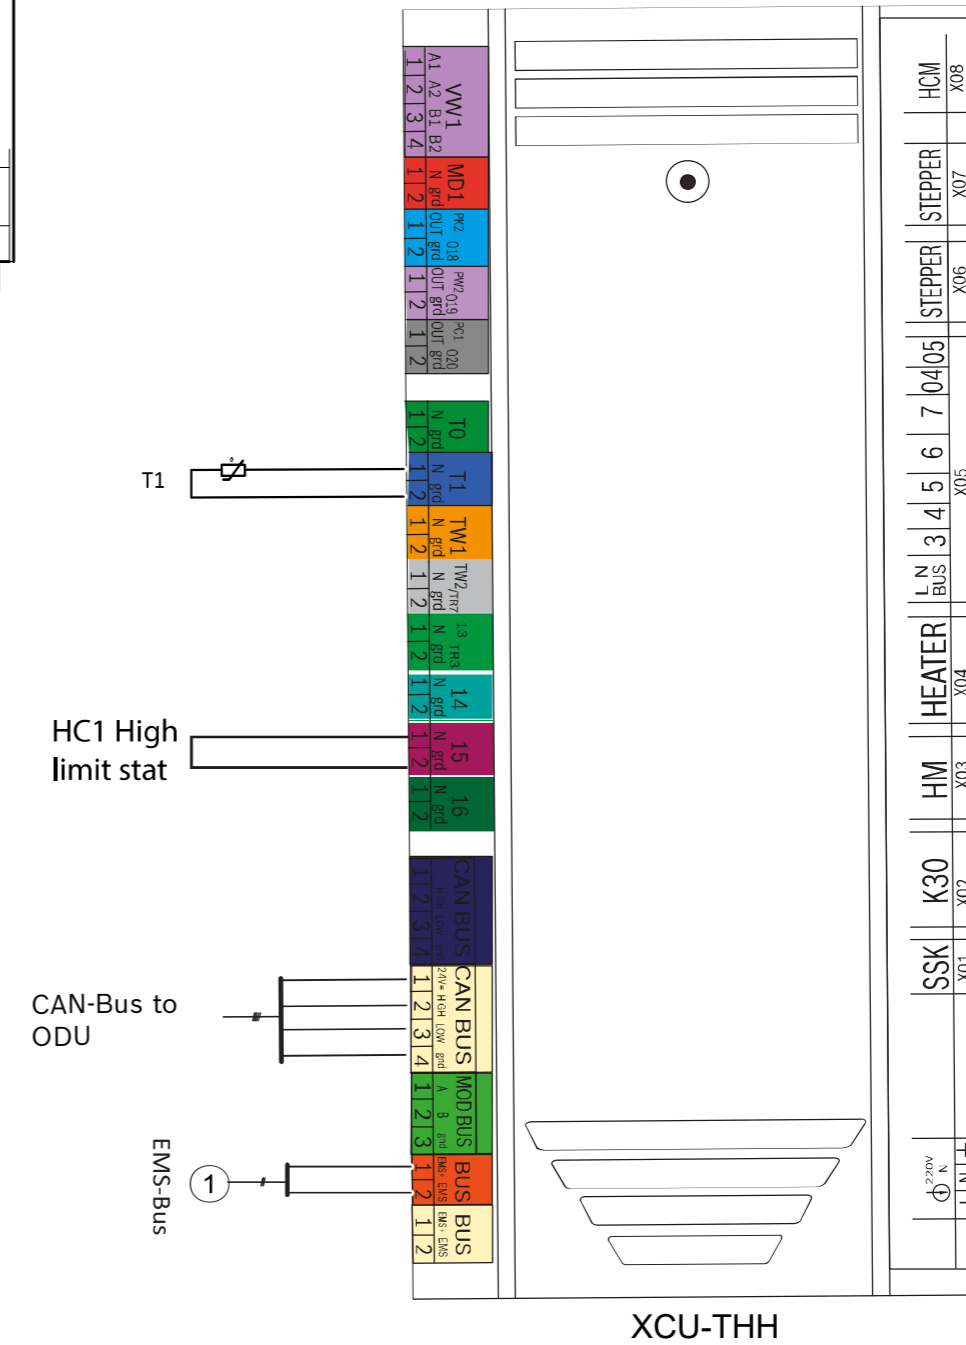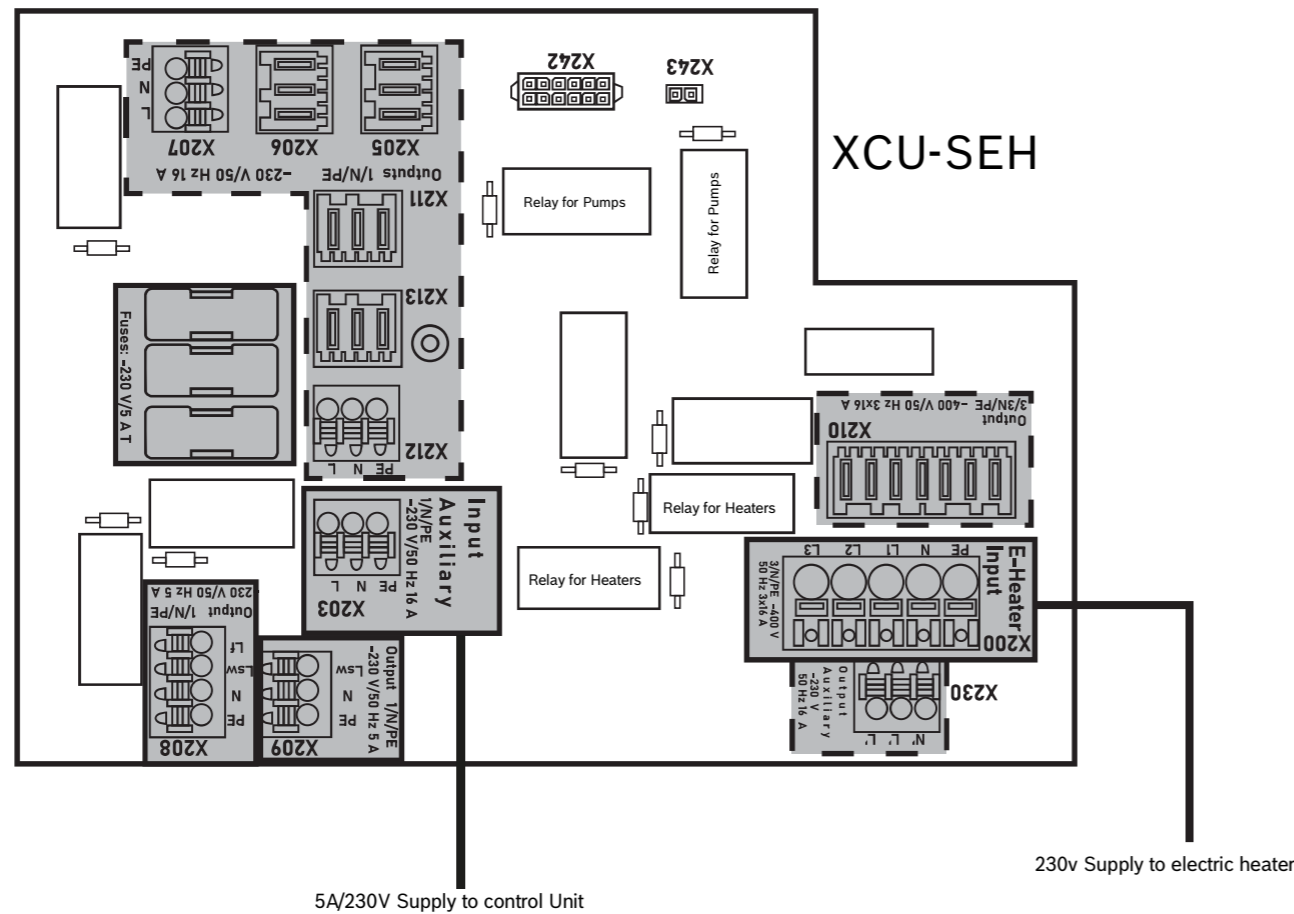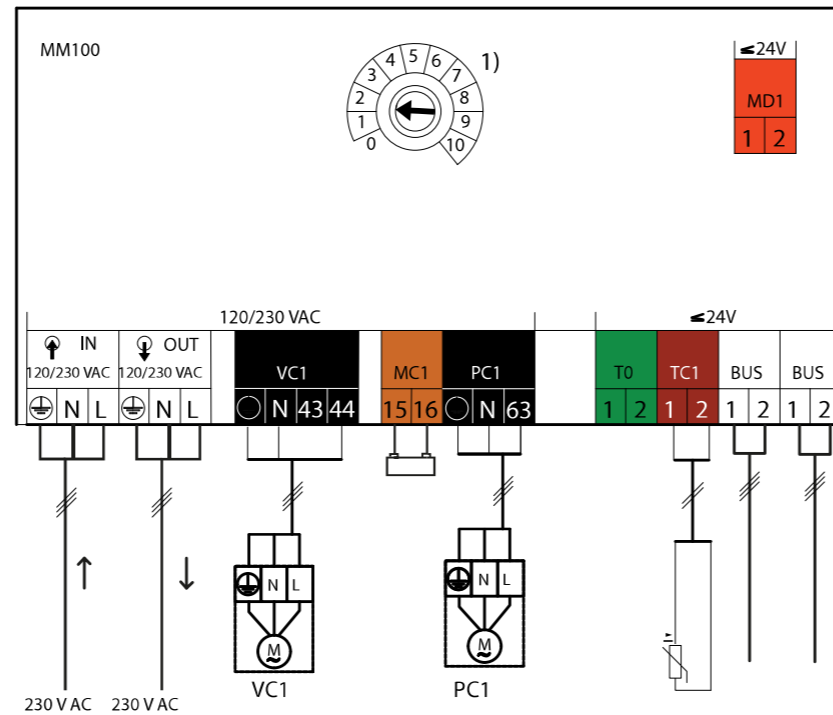




 





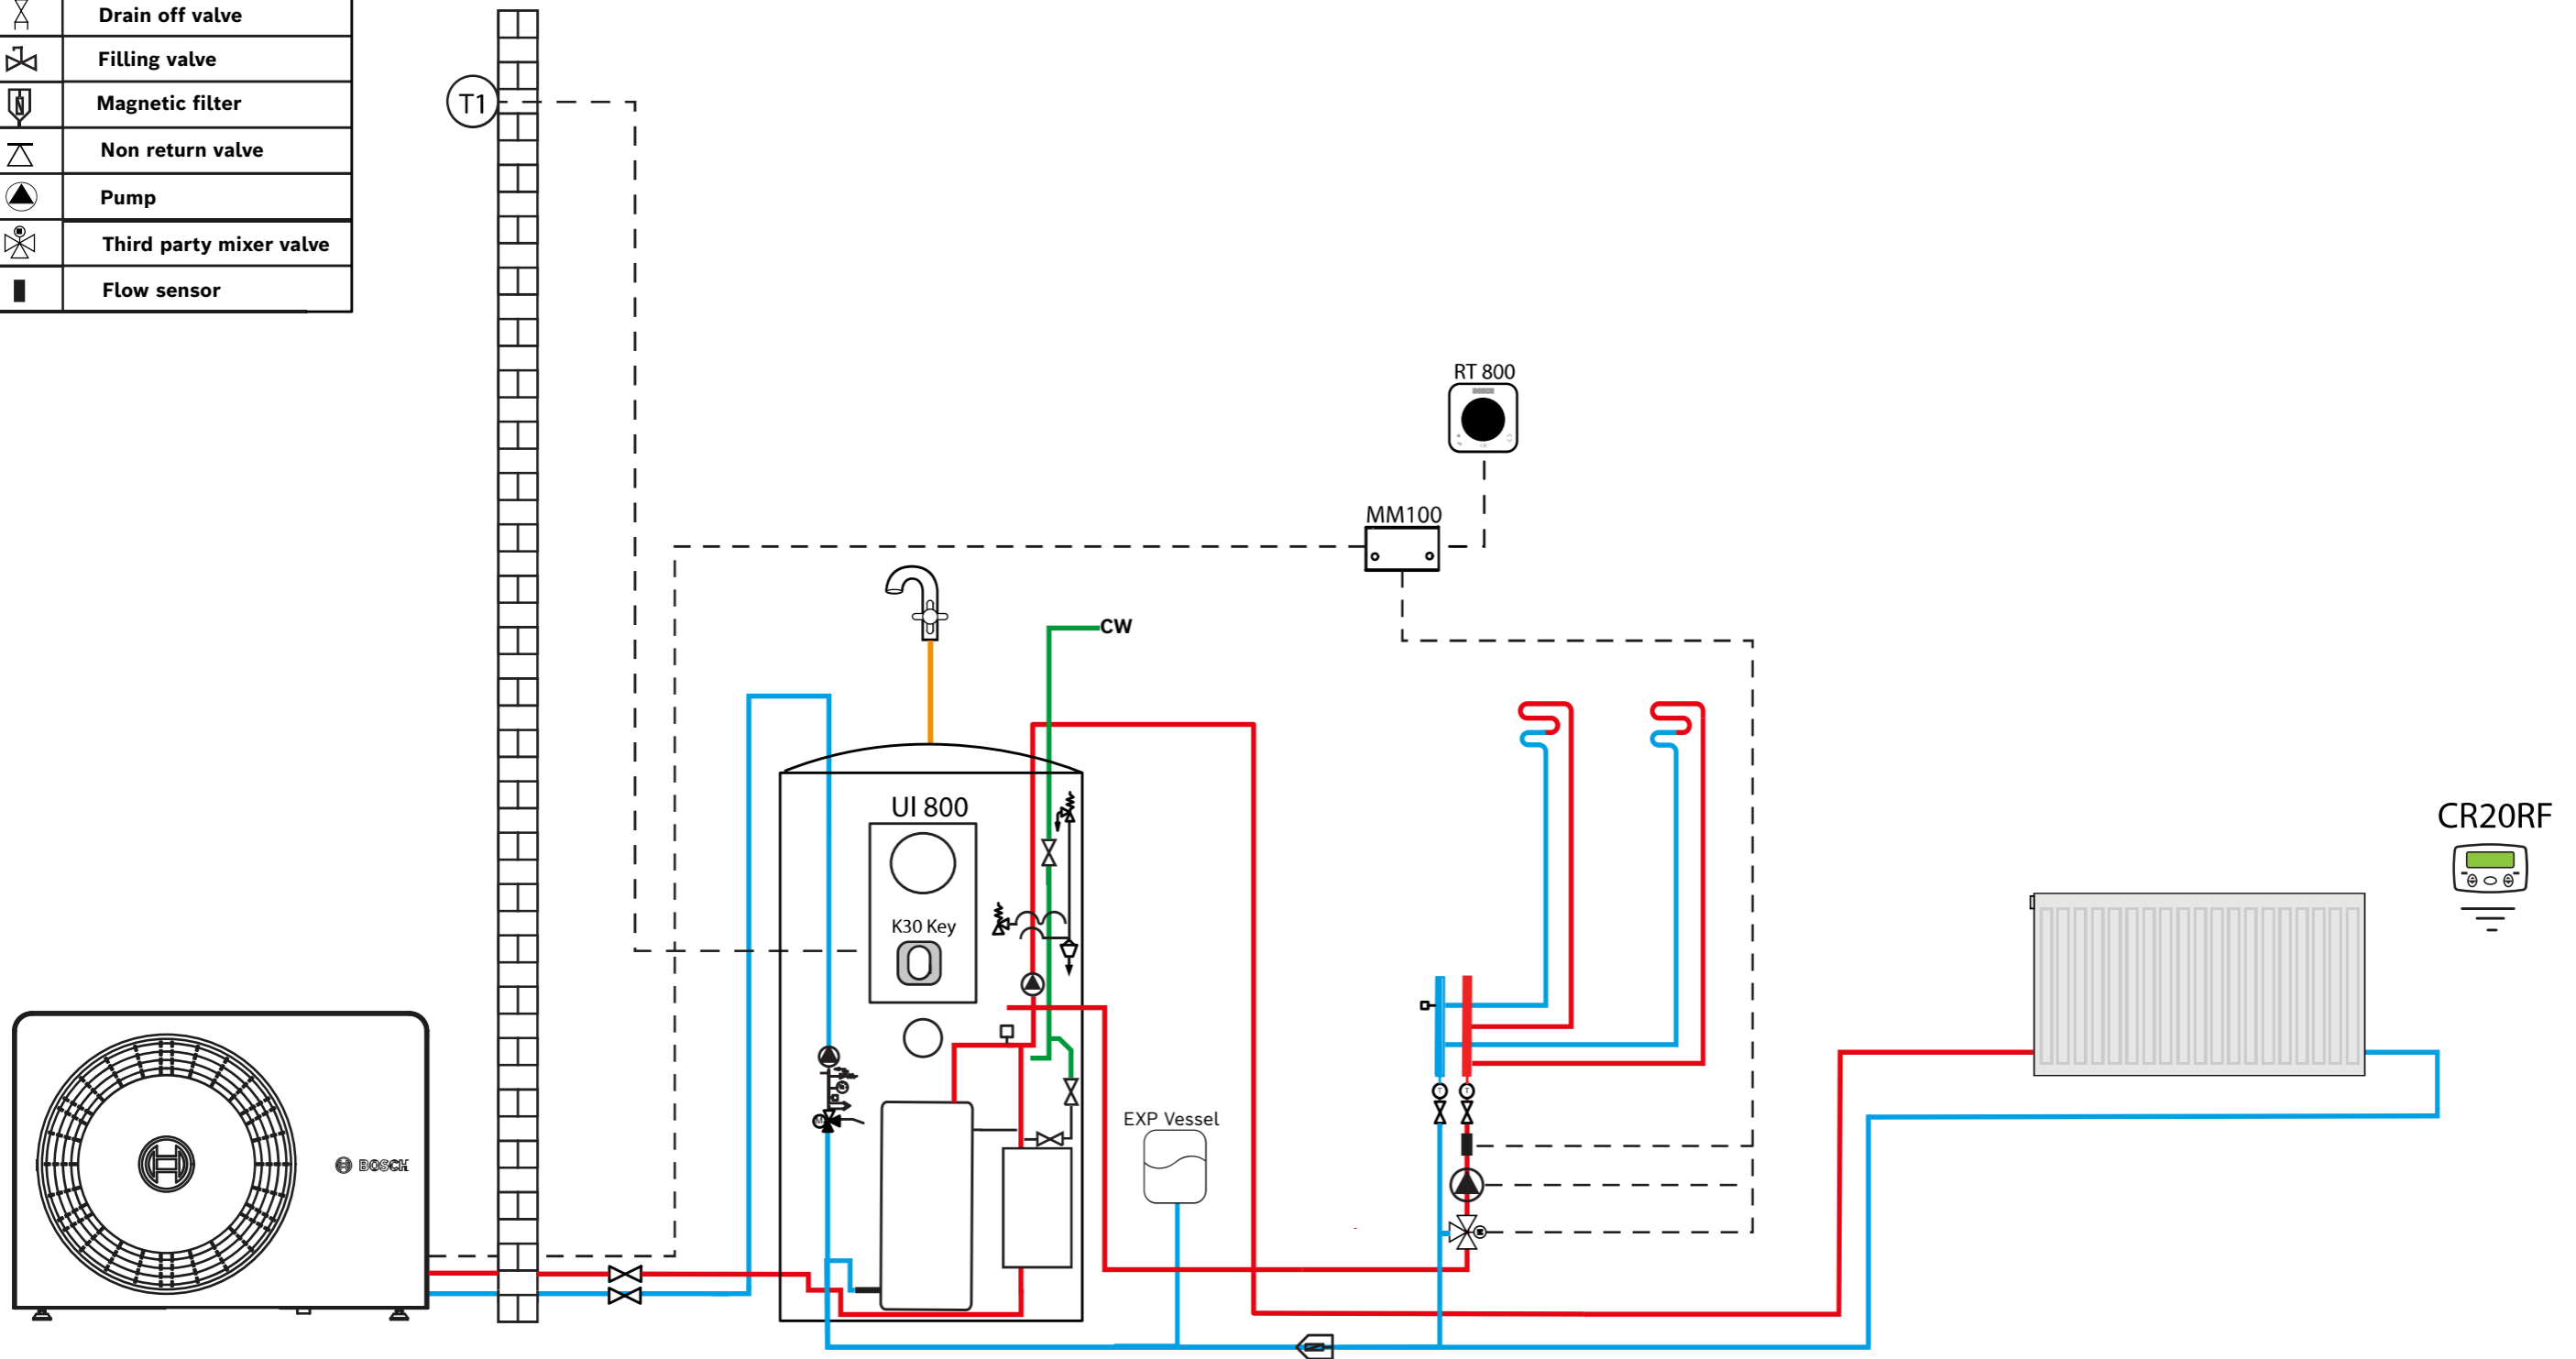
All electrical work should be carried out by a registered engineer. Wiring must comply with the latest IET wiring regulations.

Isolate the mains electricity supply before starting any work and observe all relevant safety precautions. Refer to all relevant product installation manuals for safety and installation instructions.

Whilst it is always our intention to fully assist, it is essential to recognise that all information given by the company is provided in good faith and based upon the information available. Connection labels may not match those of the products installed on site. We recommend that advice should always be checked with your installer, electrician or the manufacturer of the product in question. Consequently, the company cannot be held responsible for any liability relating to the use or repetition of such information or part thereof. In addition, whilst making every reasonable effort to monitor the performance and quality of our supply, installation and service network, we do not accept responsibility for the workmanship or operation of any third party company.

For further information or assistance please contact:  
 Email: [system.design@uk.bosch.com](mailto:system.design@uk.bosch.com) Tel: 01905751464

Key	Description
	T1 sensor
	Isolation valve
	Drain off valve
	Filling valve
	Magnetic filter
	Non return valve
	Pump
	Third party mixer valve
	Flow sensor



All electrical work should be carried out by a registered engineer. Wiring must comply with the latest IET wiring regulations. Isolate the mains electricity supply before starting any work and observe all relevant safety precautions. Refer to all relevant product installation manuals for safety and installation instructions. Whilst it is always our intention to fully assist, it is essential to recognise that all information given by the company is provided in good faith and based upon the information available. Connection labels may not match those of the products installed on site. We recommend that advice should always be checked with your installer, electrician or the manufacturer of the product in question. Consequently, the company cannot be held responsible for any liability relating to the use or repetition of such information or part thereof. In addition, whilst making every reasonable effort to monitor the performance and quality of our supply, installation and service network, we do not accept responsibility for the workmanship or operation of any third party company.




For further information or assistance please contact:  
 Email: [system.design@uk.bosch.com](mailto:system.design@uk.bosch.com) Tel: 01905751464



Key	Description
1	EMS Accessory
T1	Outdoor Temp Sensor
VC1	EMS Accessory
PC1	Canbus connection
TC1	Flow temp sensor

Optional accessory

MC1	High limit stat
-----	-----------------

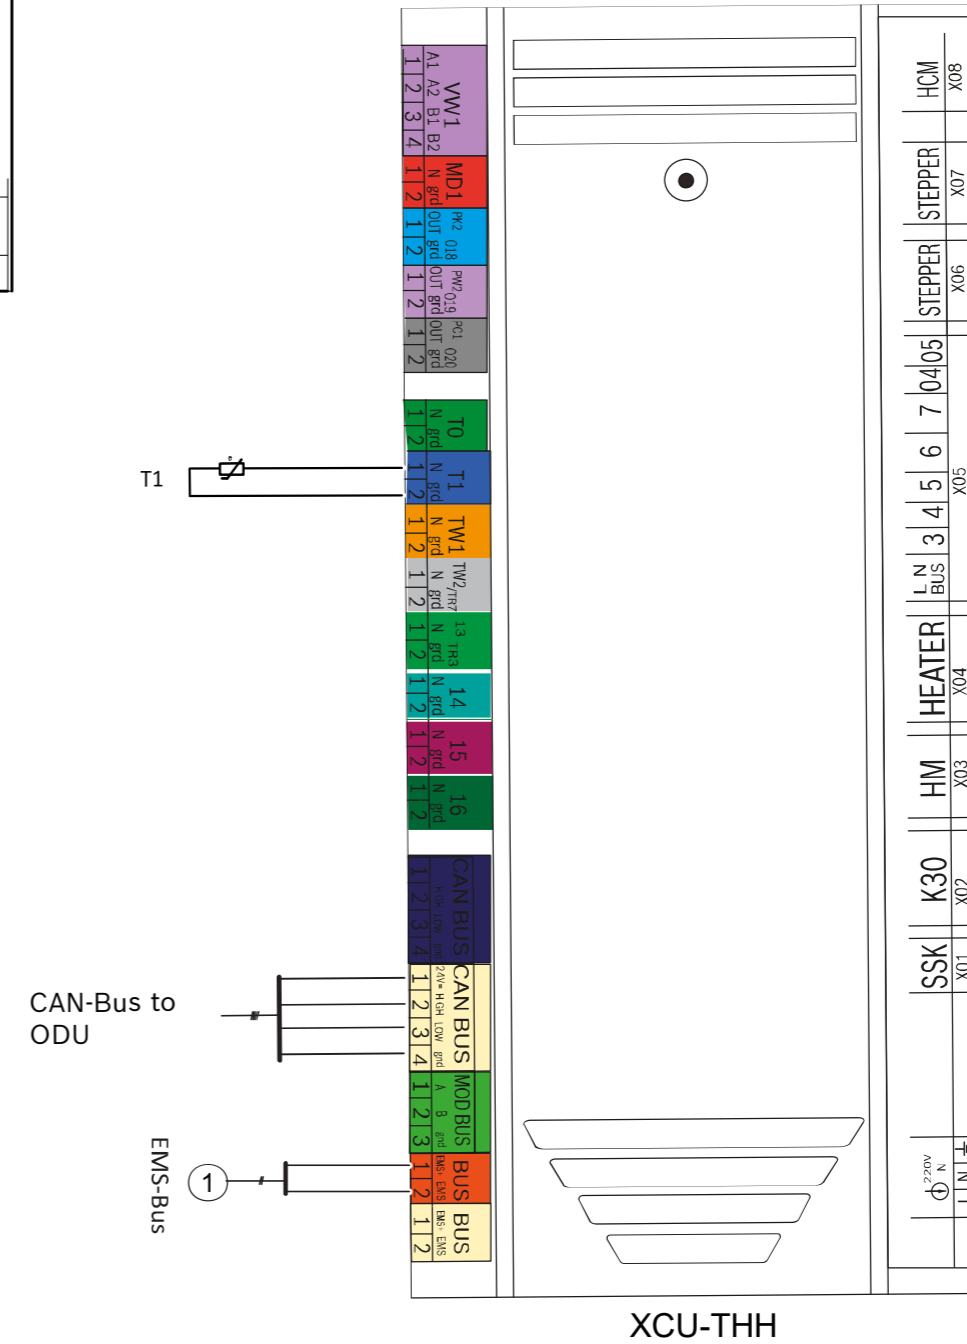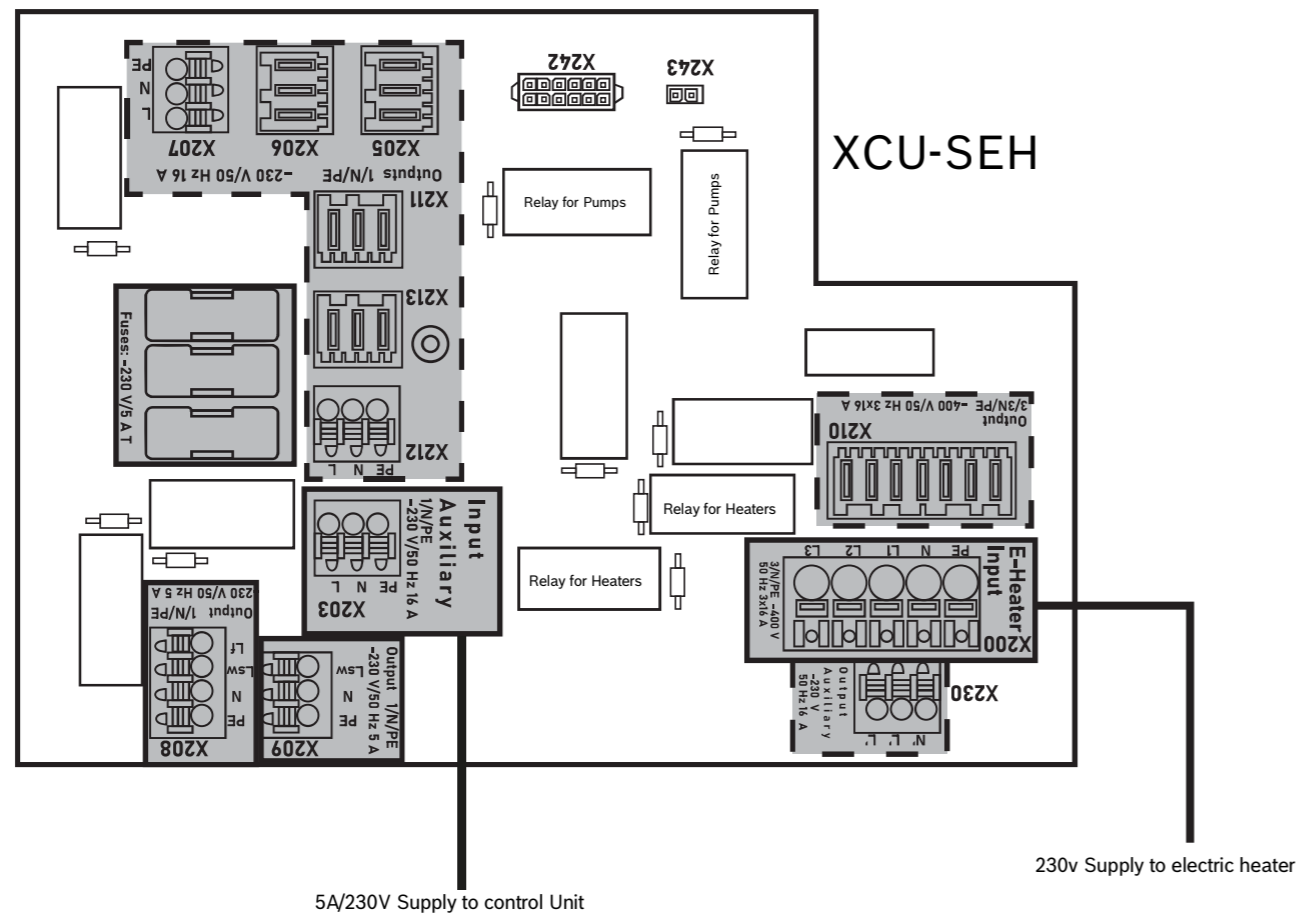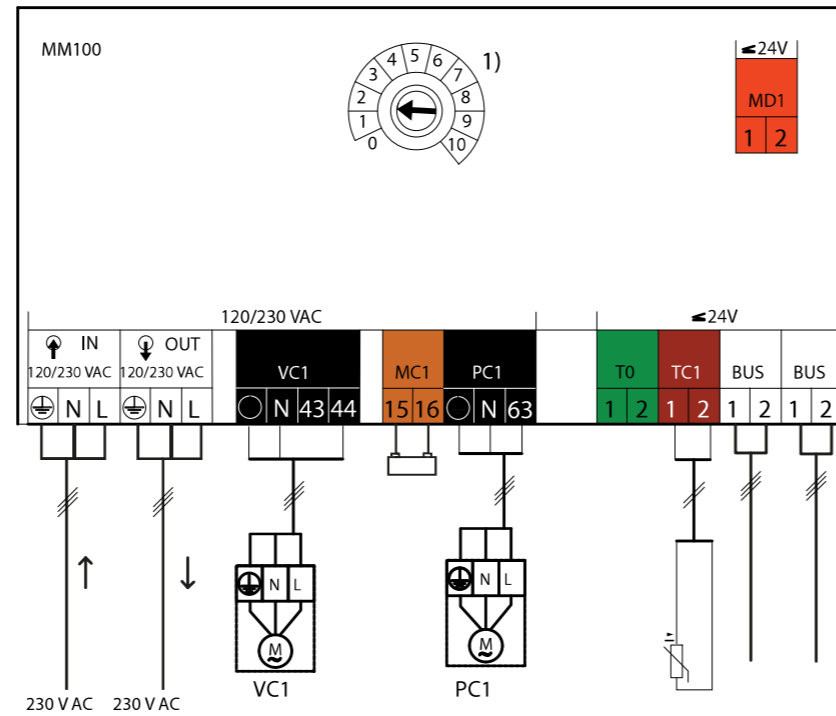

All electrical work should be carried out by a registered engineer. Wiring must comply with the latest IET wiring regulations.

Isolate the mains electricity supply before starting any work and observe all relevant safety precautions. Refer to all relevant product installation manuals for safety and installation instructions.

Whilst it is always our intention to fully assist, it is essential to recognise that all information given by the company is provided in good faith and based upon the information available. Connection labels may not match those of the products installed on site. We recommend that advice should always be checked with your installer, electrician or the manufacturer of the product in question. Consequently, the company cannot be held responsible for any liability relating to the use or repetition of such information or part thereof. In addition, whilst making every reasonable effort to monitor the performance and quality of our supply, installation and service network, we do not accept responsibility for the workmanship or operation of any third party company.

For further information or assistance please contact:

Email: [system.design@uk.bosch.com](mailto:system.design@uk.bosch.com) Tel: 01905751464